


LINKLIFT


2024 EDITION

Revolutionizing
vertical load transfer

Where **smoothness**
meets **efficiency**

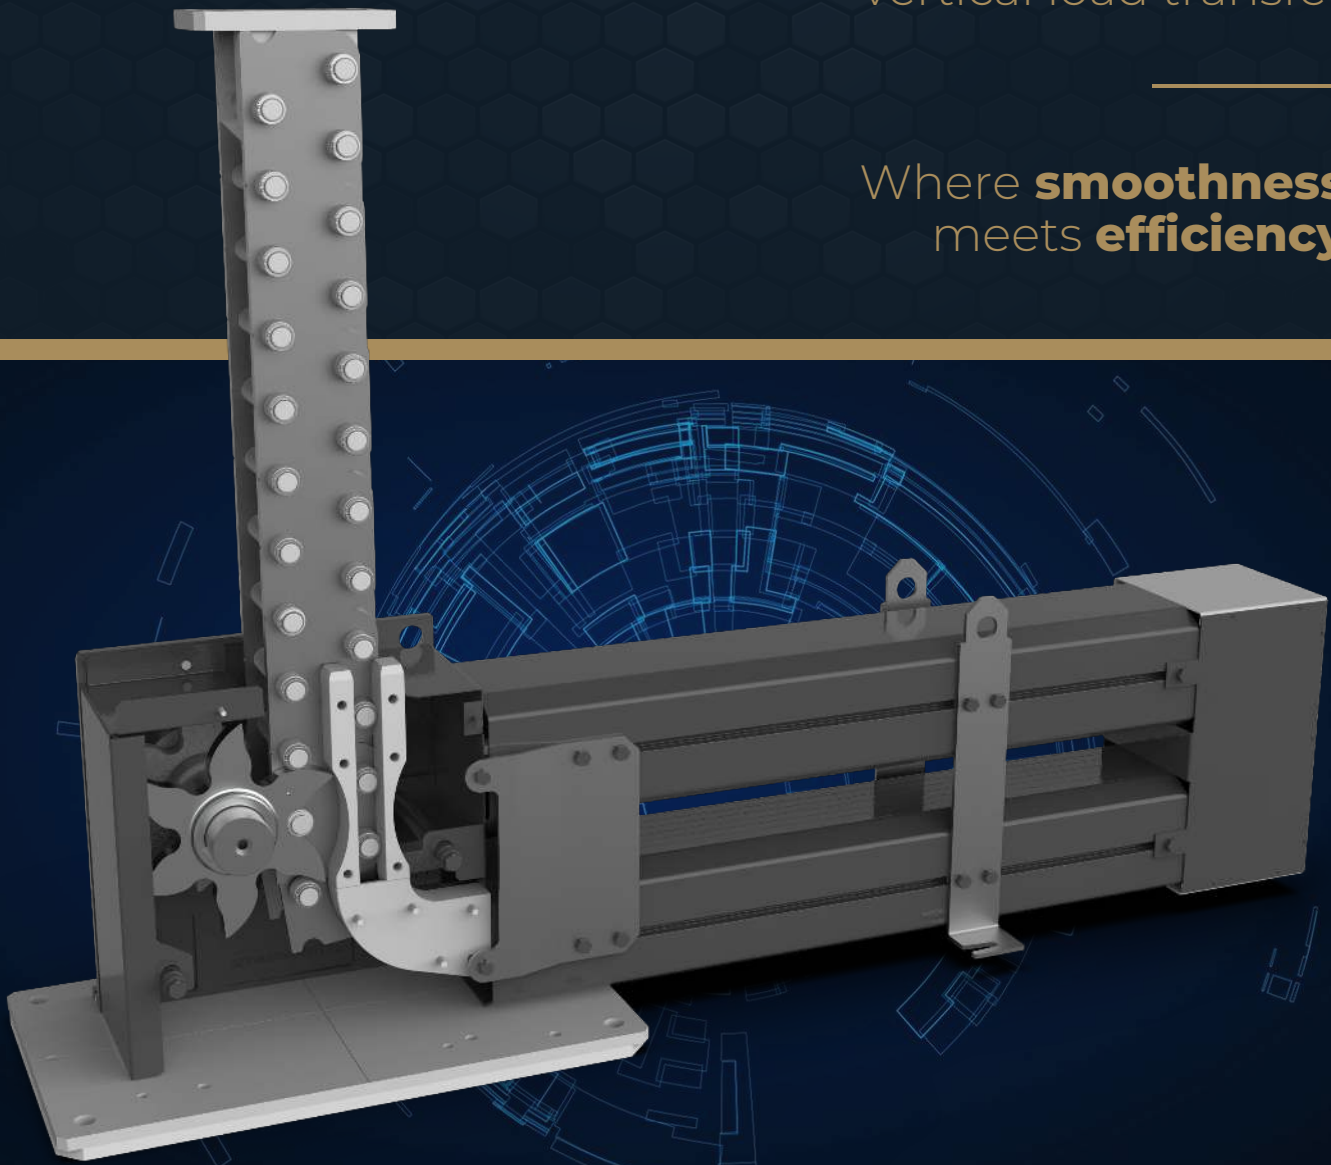

SERAPID

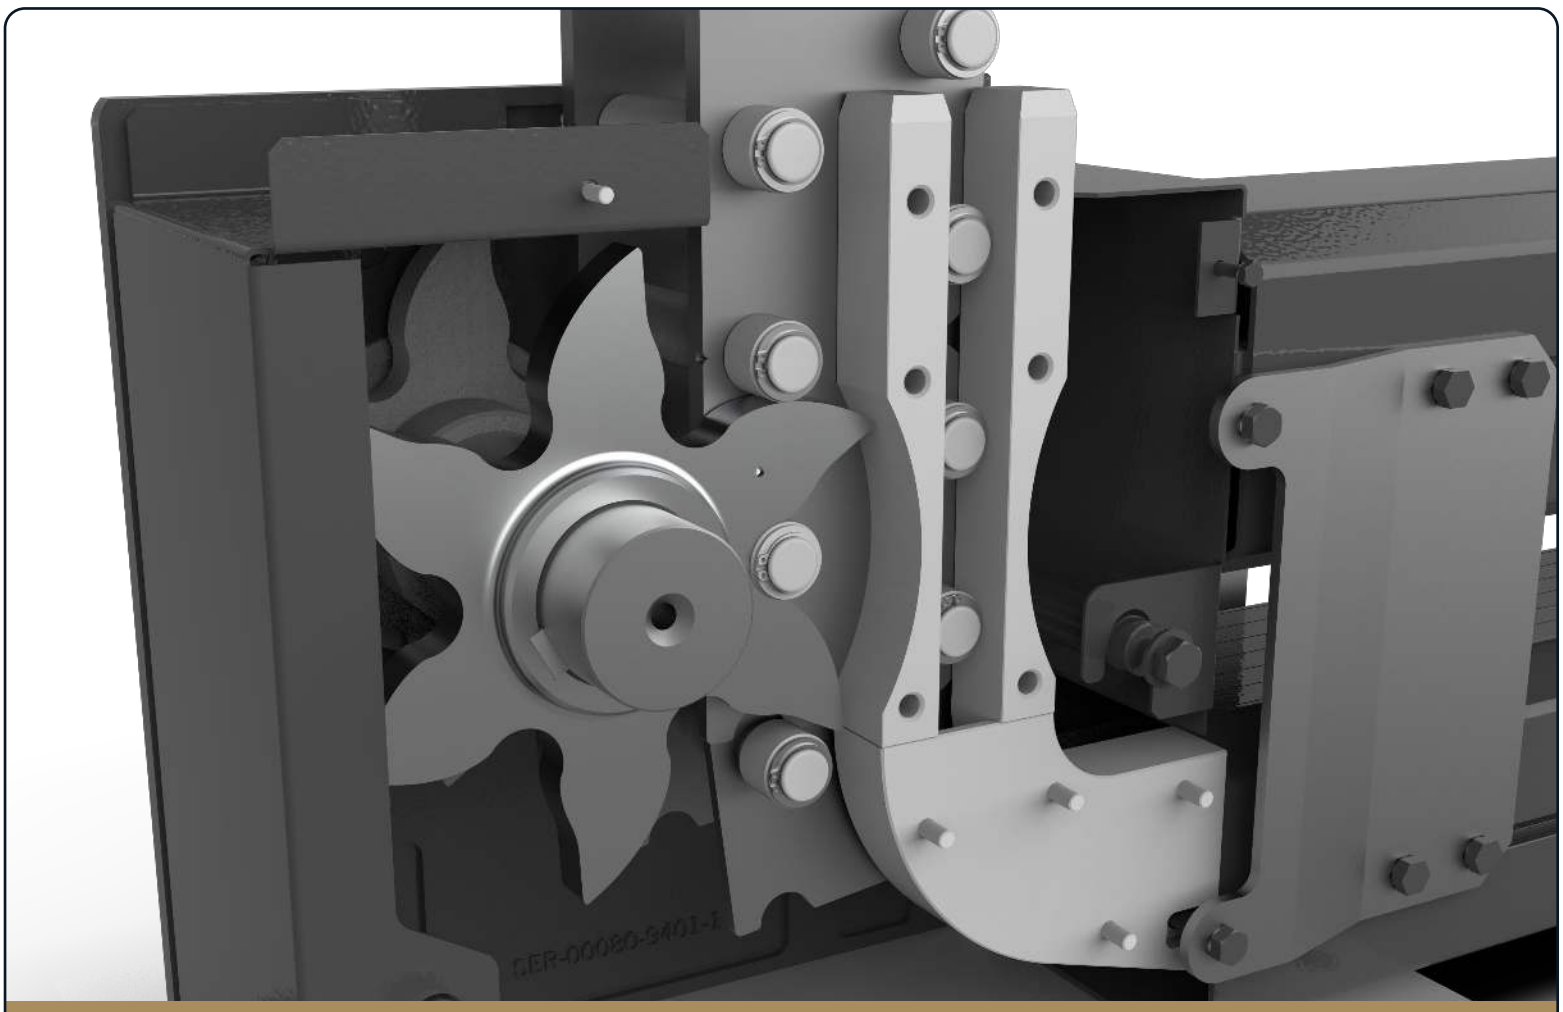


SERAPID

LEVERAGING EXCELLENCE



COMPACT

Shallow Pit
Compatible

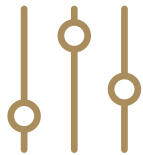

PRECISE

Accurate & Repeatable
Positioning



ROBUST

High Reliability &
Low Maintenance



GREEN

High Energy
Efficiency

TABLE OF CONTENTS

LINKLIFT OVERVIEW

LINKLIFT BASICS	05
RIGID CHAIN TECHNOLOGY	06
LINKLIFT PERFORMANCE	07
DESIGN + DEVELOPMENT	08
3RD GENERATION LINKLIFT	09

INDUSTRY SPECIFICATIONS

THEATRE & STAGE LIFTS	11
INDUSTRIAL LIFTS	13

OPERATIONAL DATA

STROKE CAPACITIES	16
LOAD CAPACITIES	17
LOAD CAPACITY CHARTS	18

PRODUCT OPTIONS


MAGAZINE (STRAND) OPTIONS	21
LOAD CELL / REACTION PLATES	22
INTERMEDIATE FRAMES	23
POSITIONING DEVICES	24

SAMPLE DRAWINGS

LL30	26
LL30LT	27
LL50/50R	28
LL80/80R	29
LL100/100R	30

CONTACT SERAPID

SERAPID

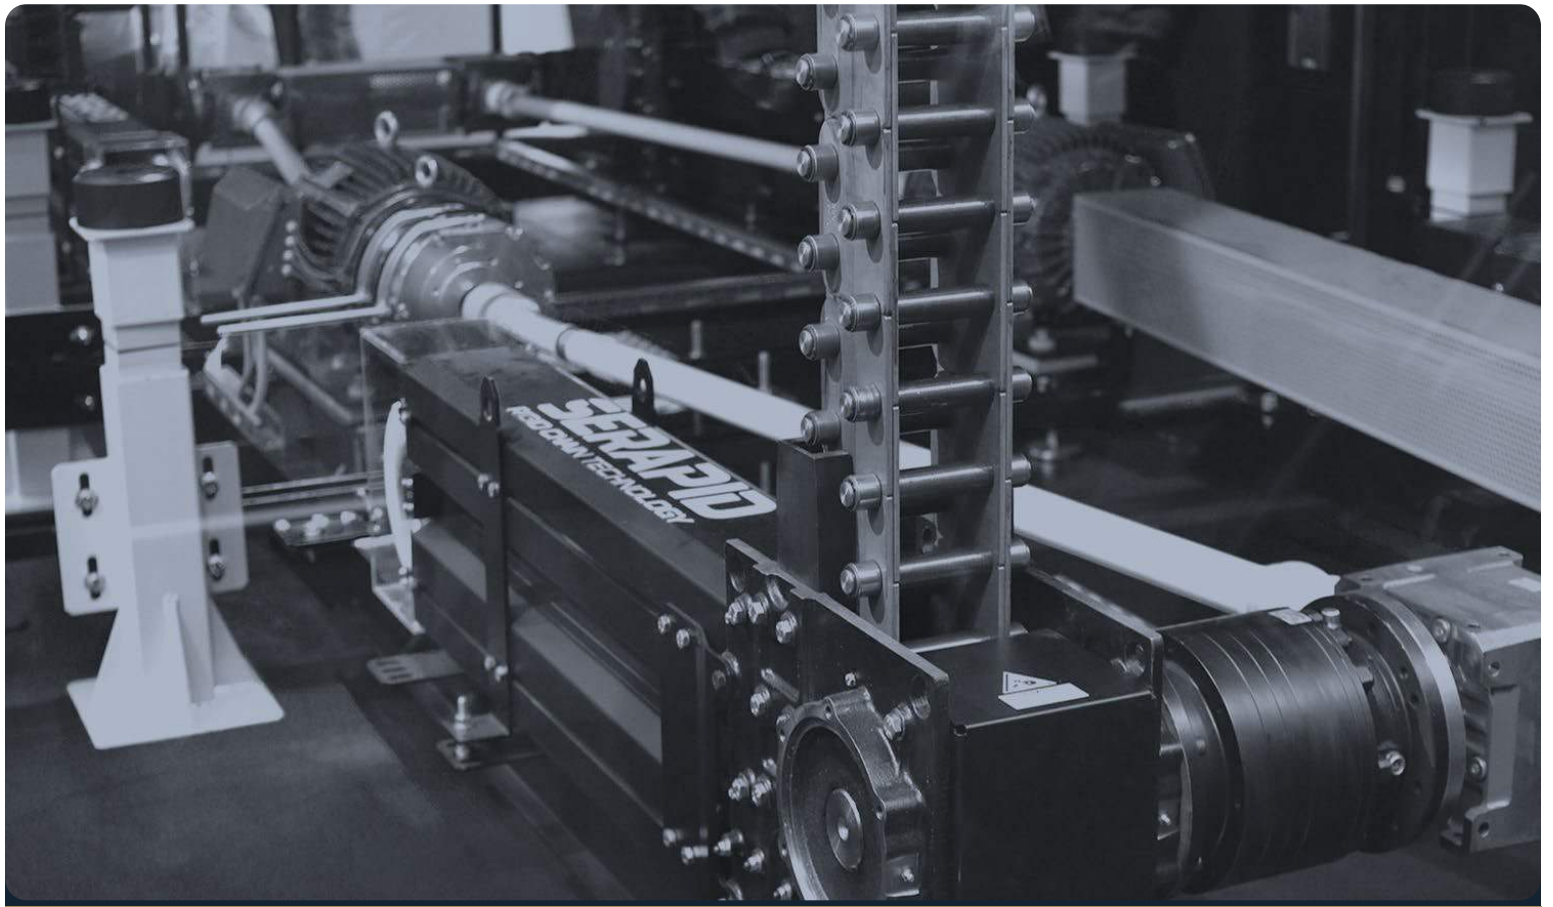

OVERVIEW

LINKLIFT BASICS

RIGID CHAIN TECHNOLOGY

LINKLIFT PERFORMANCE


DESIGN + DEVELOPMENT

3RD GENERATION LINKLIFT



LINKLIFT BASICS

Experience the perfect balance of power and finesse with SERAPID's LINKLIFT product line.

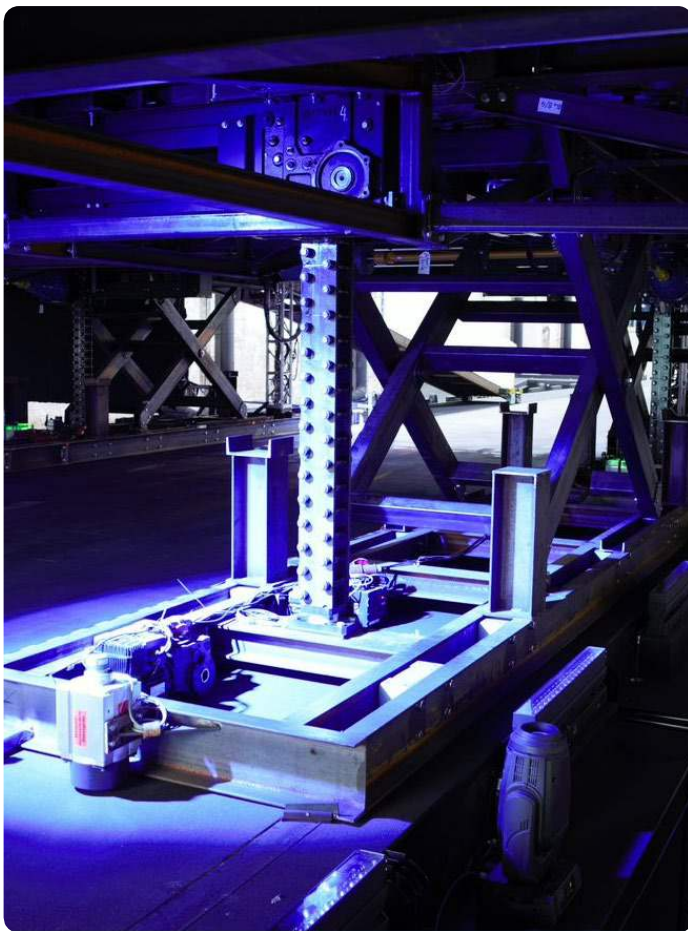

The LinkLift has been specially designed to lift heavy loads over long travel distances. SERAPID's proprietary technology presents a highly practical and optimal solution, particularly in complex situations. Whether you require smooth and controlled movements in theaters, industrial environments, or any other application that demands precise vertical positioning and stability, the LinkLift system with Rigid Chain Technology delivers unmatched performance and efficiency in vertical transportation solutions.

Engineered to surpass traditional lifting methods, the LinkLift system provides seamless vertical motion, effortlessly handling heavy loads with utmost efficiency. This technology offers the advantages of other drive mechanisms (such as hydraulic cylinders, spindles, and belts) without the disadvantages. The LinkLift is driven by multiple sprockets and uses guides to ensure that the links lock in place during movement. As a result, a telescopic lifting column of exceptional stability and rigidity is produced.

RIGID CHAIN TECHNOLOGY

Elevate your engineering capabilities with the versatility of SERAPID's proprietary technology.





Rigid Chain Technology (RCT), as implemented in SERAPID's LinkLift system, operates on the principle of interconnected links working together to form a solid and rigid structure. Each link within the chain is meticulously designed and engineered for optimal performance.

When the system is activated, the chain smoothly and seamlessly extends, creating a continuous and unyielding column. This extension process is achieved through the coordinated mechanical movement of individual interlocking links, which are then guided via guides for precision linear movement. When retracted, the chain is stored in a compact magazine .

SERAPID chain links have been engineered with gravity at the exact geometric center. The result is a robust and reliable lifting and positioning mechanism capable of withstanding significant loads while maintaining exceptional stability and accuracy. Rigid Chain Technology empowers engineers with a versatile solution that excels in a wide range of applications, offering unparalleled strength, precision, and durability.

LINKLIFT PERFORMANCE

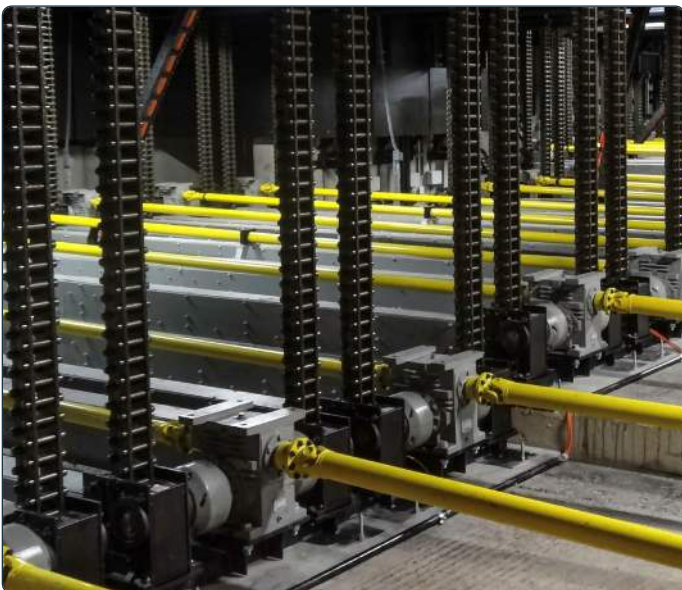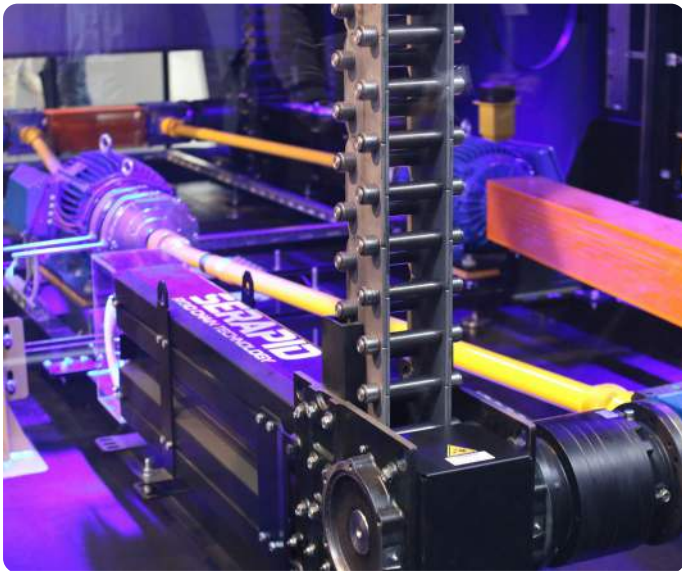

Advantages of the SERAPID LinkLift:

- ▶ Positioning control accuracy in the millimeter, even at high speeds
- ▶ Payload per lifting column up to 15t dynamic, up to 20t static
- ▶ Up to vertical travel/stroke of c. 50m when actively guided (see options page 14)
- ▶ Maximum vertical travel up to 18m with intermediate frames (see options page 14)
- ▶ Unguided lifting path up to 8m
- ▶ Standard speeds up to 300 mm/s, higher speeds on demand
- ▶ High stability and load resistance
- ▶ No bouncing of load, permanent holding of the approached position
- ▶ Proven in a wide range of applications
- ▶ Low maintenance, long service life
- ▶ Cost-effective / high efficiency (≥80%)
- ▶ Application-specific designs, system engineering and complete solutions

DESIGN & DEVELOPMENT



Reinventing the loads handling industry through continuous innovation: **SERAPID's outstanding R&D sets the standard for cutting-edge technology.**

The LinkLift has received numerous awards worldwide since its market launch in 1999 and has now grown to a product line of 8 different models. In 2009, the LinkLift 2 was released with improved lifting capacities, optimization of the sprocket and a modular magazine system.

SERAPID has now further developed the product line to include the compact LinkLift 30LT (low trim, on-demand only), and the new third generation LinkLift, commanding even stricter noise, service life and speed requirements.


The LinkLift is capable of transporting payloads up to 200 kN per lifting column, with stroke capacity ranging from 8m for unguided loads to 18m using intermediate frames. Distances up to 50m are possible for lifts equipped with wall guides.

Contact our team for specific limits.

Innovative options such as maintenance blocks, integrated load measurement, and a variety of guides allow for custom solutions to almost any linear motion challenge especially for extremely heavy loads and challenging environments.

LINKLIFT GENERATION 3

OPTIMIZED PERFORMANCE

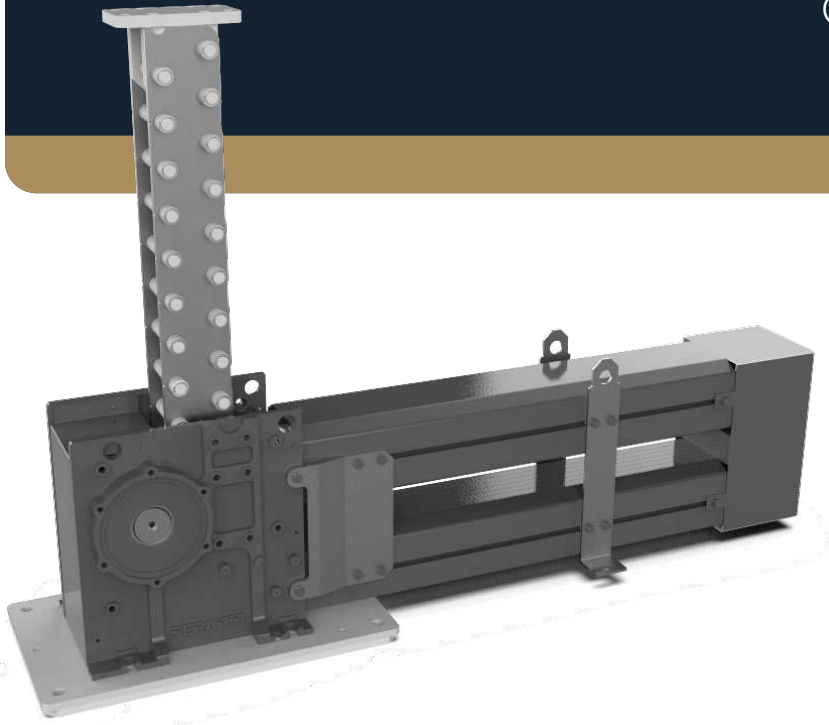

UP TO **20%**
REDUCED
VIBRATION
AT HIGH SPEEDS

THE NEW LINKLIFT

SERAPID has been consistently innovating and improving products to achieve the highest performance possible for over 50 years.


This dedication to innovation has resulted in the development of the most recent design, the 3rd generation LinkLift, which boasts up to 20% reduced vibration at high speeds.


3rd generation LinkLift now available in these models:

LL50/R - LL80/R - LL100/R

Extension Acceleration RMS

Wb Weighting filter

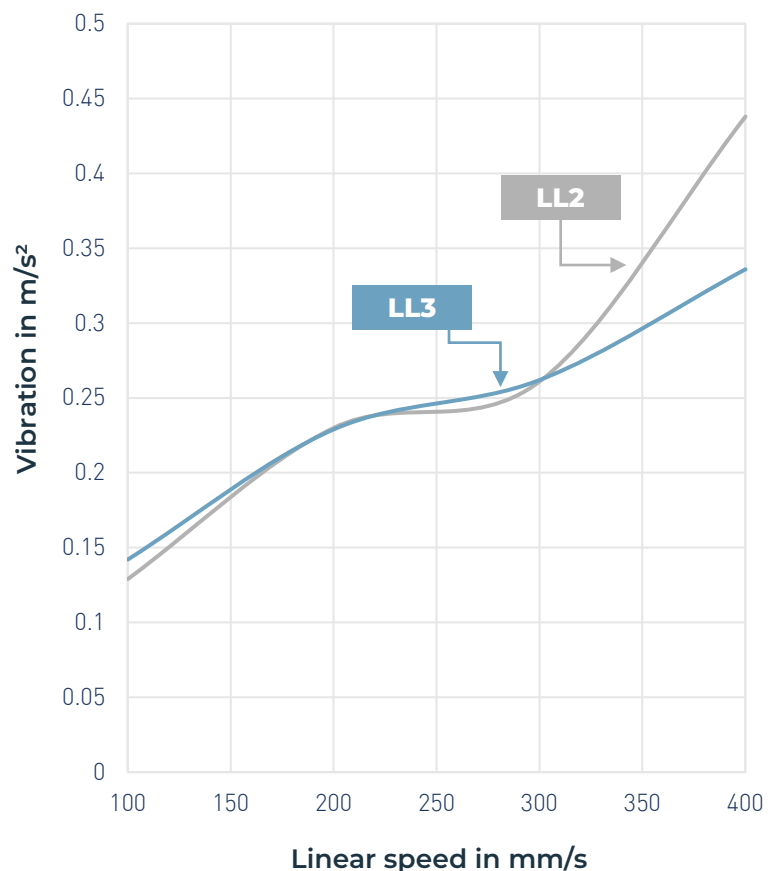

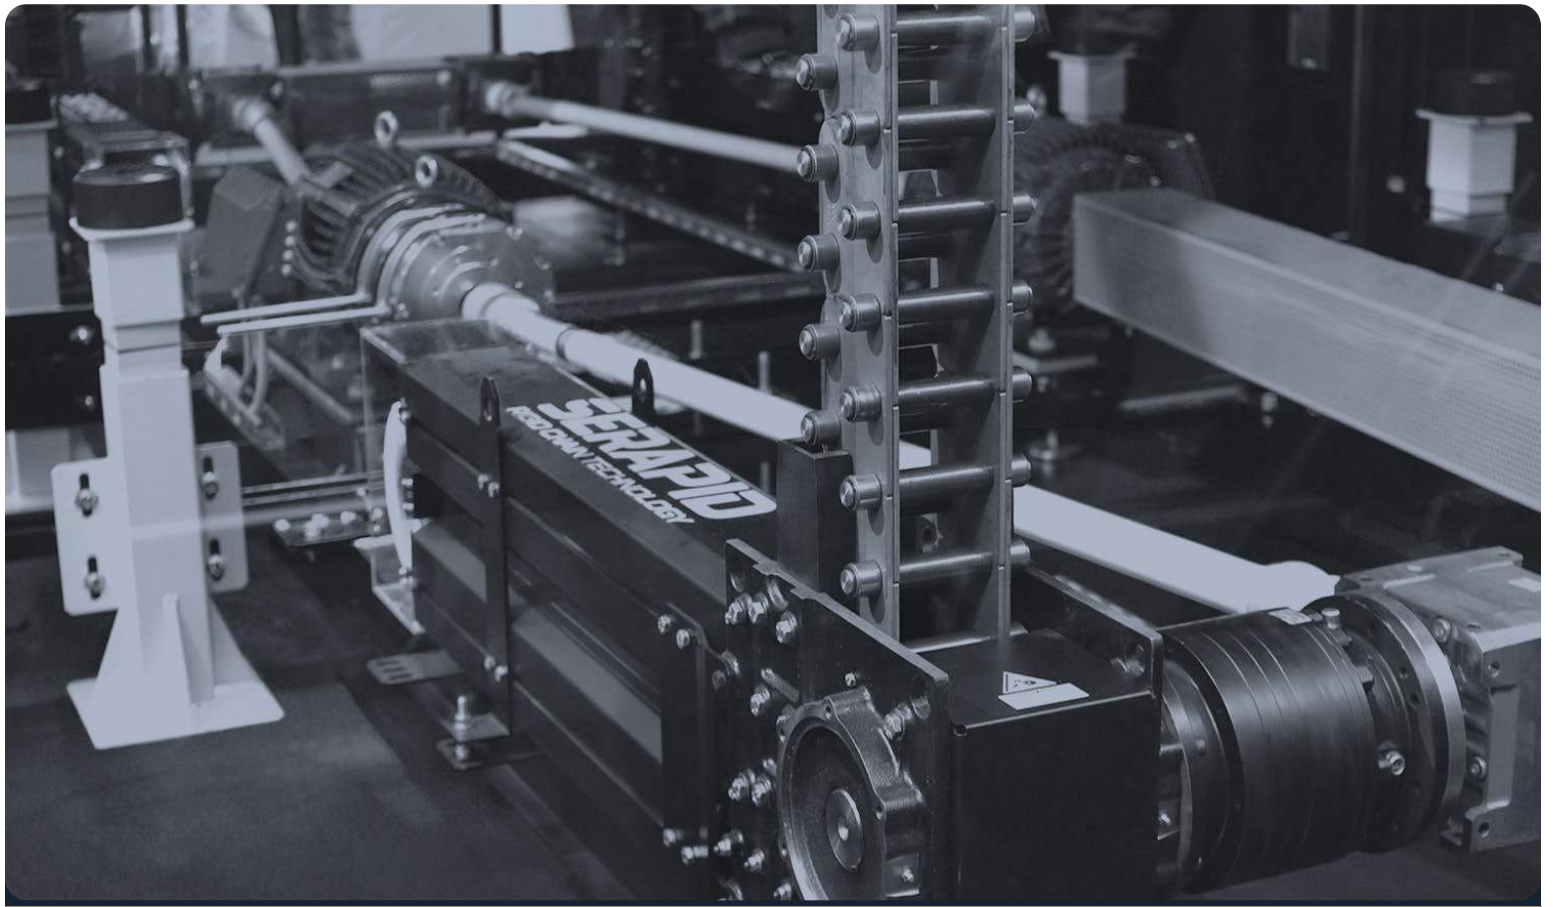

INDUSTRY **SPECIFICATION**

THEATRE & STAGE LIFTS


INDUSTRIAL LIFTS

TYPICAL AND CODE COMPLIANT SETUPS



THEATRE & STAGE LIFT CONFIGURATIONS

The SERAPID LinkLift has been the **gold standard** in stage and theater lifts for over 20 years.

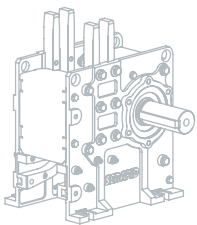


TURN-KEY & CODE COMPLIANT SYSTEMS

SERAPID is trusted for smooth, quiet & reliable lift configurations in the stage, theater, and large venue industries. Our lift systems comply with EN17206 regulations, and can be designed with any number of LinkLifts, whether it's 4, 6 or 40. SERAPID is a one-stop-shop for lift systems, offering design, engineering, assembly and installation of jobs.


LINKLIFT ASSEMBLY

TYPICAL EN17206 COMPLIANT STAGE SET-UP

4 UNITS – STANDARD INSTALLATION FOR THEATER LIFTS

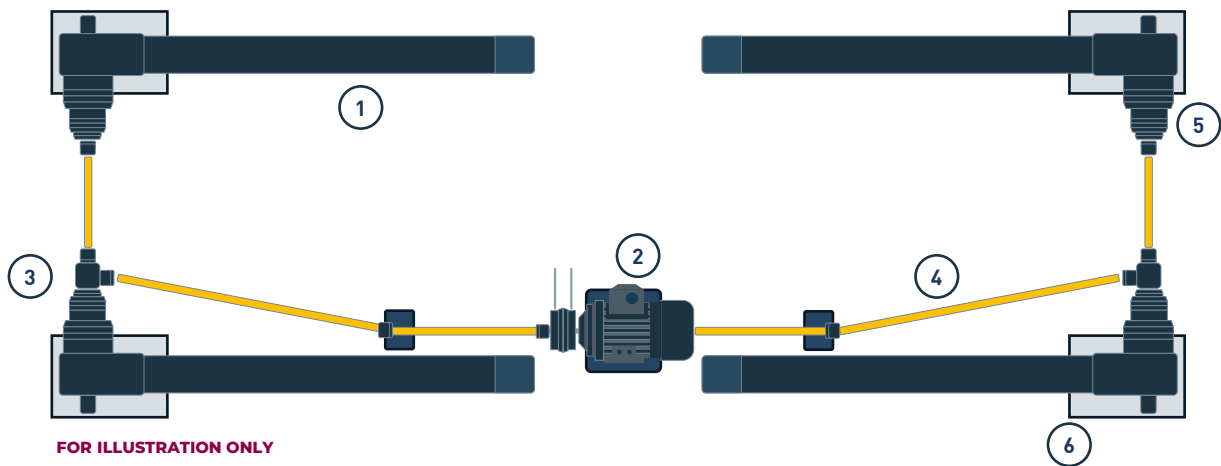

6 UNITS – STANDARD INSTALLATION FOR THEATER LIFTS


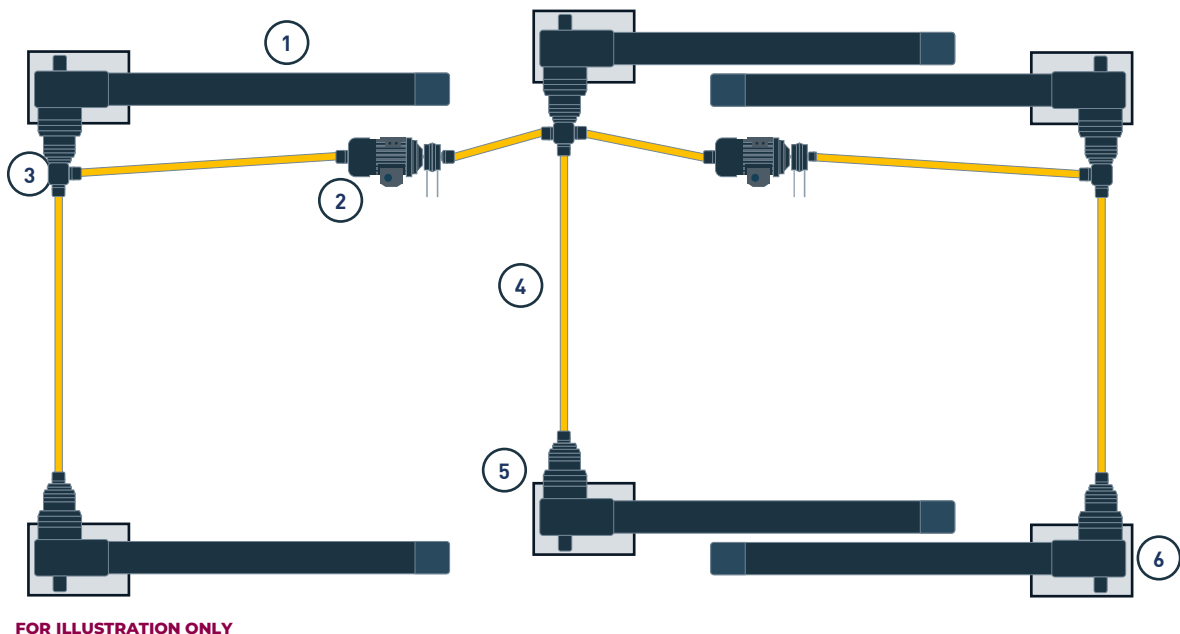


- 1. LinkLift
- 2. Motor with Single or Double Brake
- 3. Bevel Gear Box
- 4. Cardan Shaft
- 5. Planetary Gear Box
- 6. Mounting Plates

*Additional units may be added as needed

INDUSTRIAL LIFT CONFIGURATIONS

SERAPID industrial handling and freight lifts offer high load capacity & precision movement.

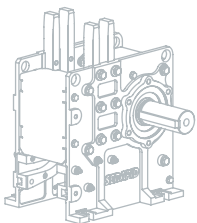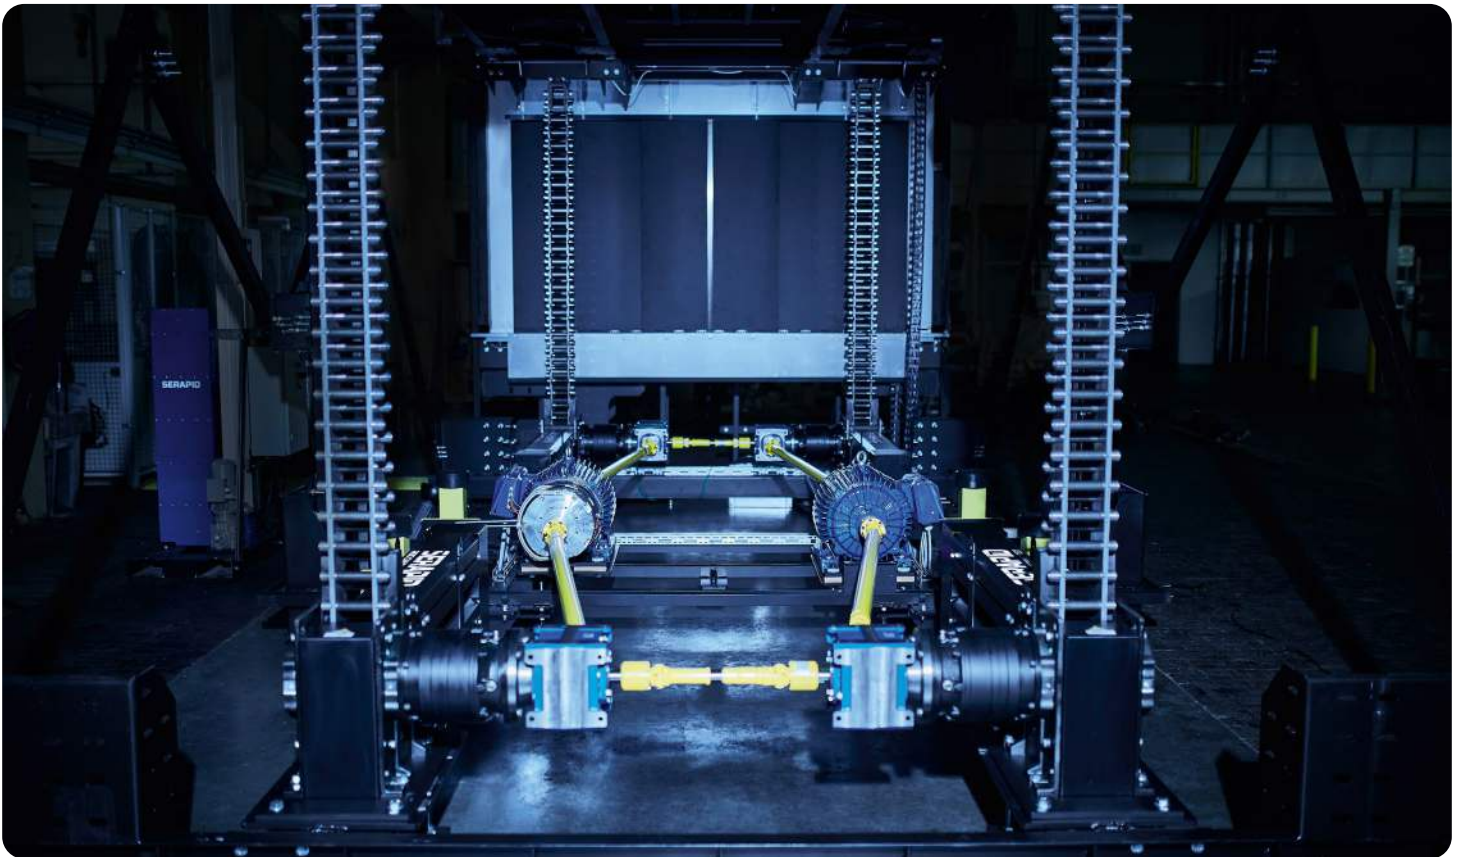


TURN-KEY & CODE COMPLIANT SYSTEMS

SERAPID provides precision movement of high load capacities in the freight, industrial handling and manufacturing industries. Our turn-key lift systems always comply with EN81 and/or Machine Directive regulations. SERAPID is a one-stop-shop for lift systems, offering design, engineering, assembly and installation of jobs.

LINKLIFT ASSEMBLY

EN81 COMPLIANT CLOSED-LOOP SYSTEM


4 UNITS – STANDARD INSTALLATION FOR INDUSTRIAL LIFTS

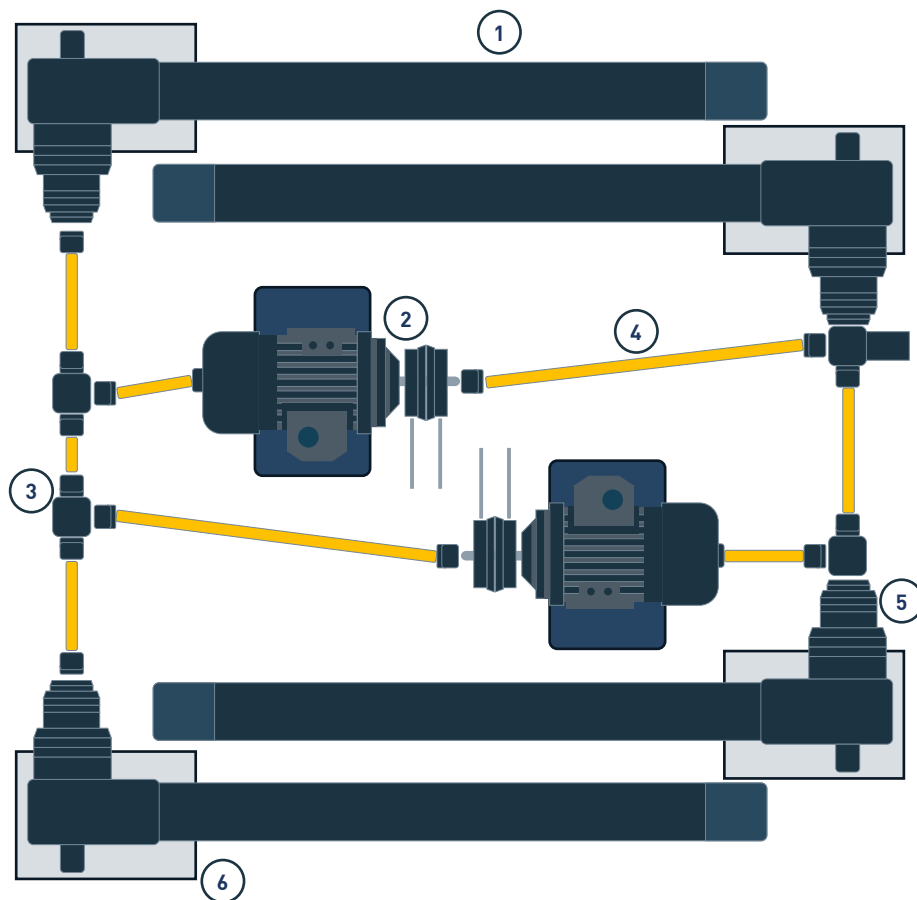

FOR ILLUSTRATION ONLY

- 1. LinkLift 2. Motor with Single or Double Brake 3. Bevel Gear Box
- 4. Cardan Shaft 5. Planetary Gear Box 6. Mounting Plates

***Additional units may be added as needed**

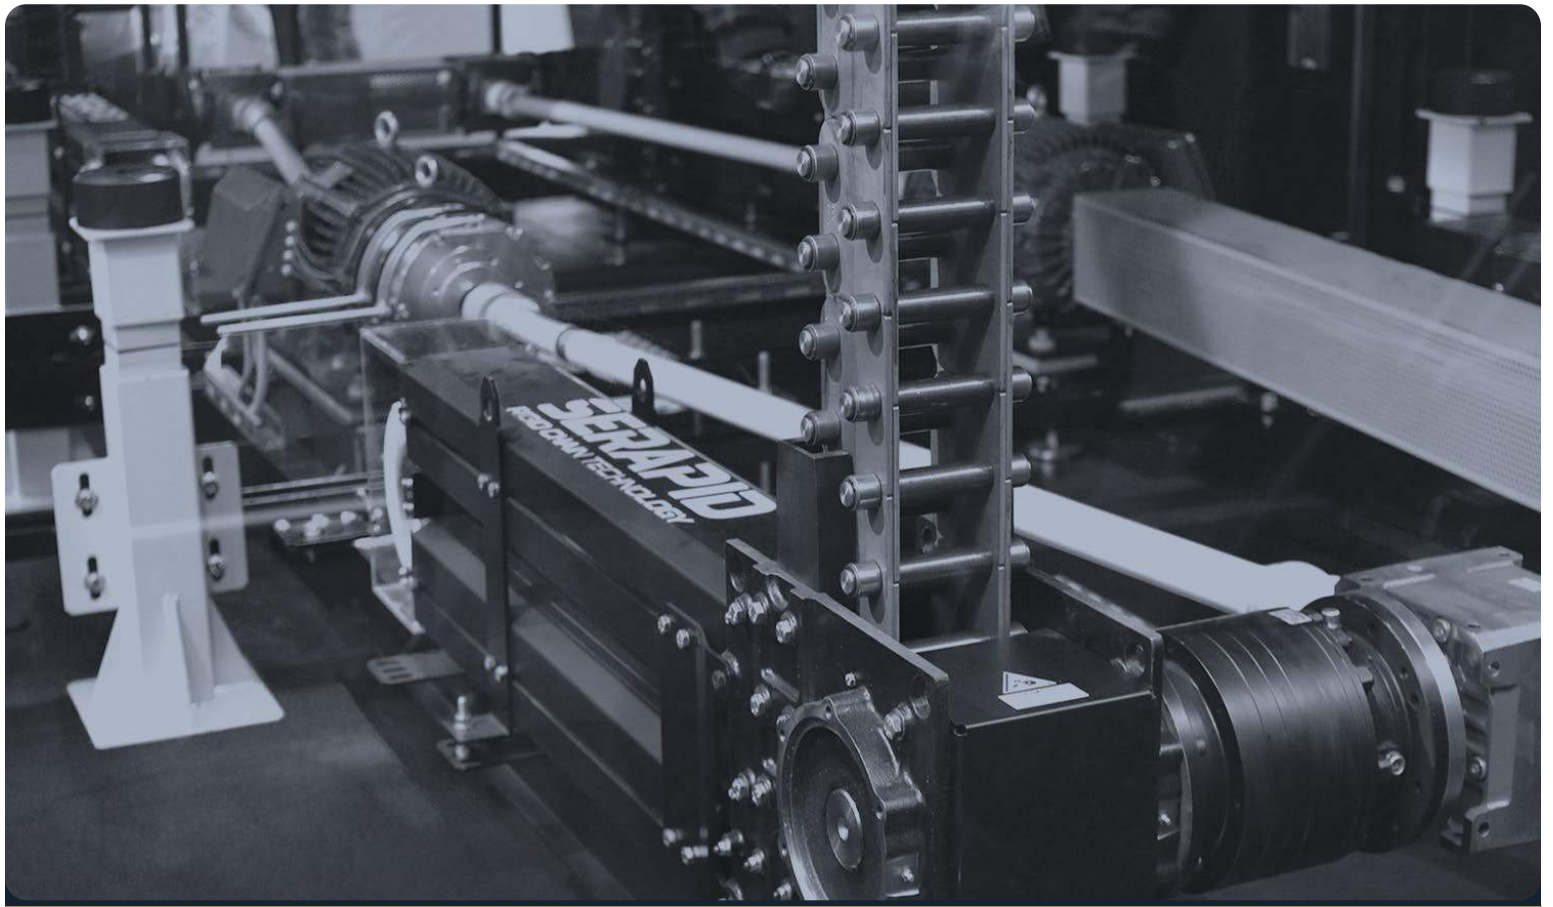

OPERATIONAL **DATA**

STROKE CAPACITIES


LOAD CAPACITIES

LOAD CAPACITY CHARTS

STROKE CAPACITIES

MAXIMUM VERTICAL STROKE

The maximum stroke of the LinkLift depends on several factors such as chain size, payload weight, stroke distance and lift speed (see static and dynamic capacity charts). Engineering consultation will be required to determine the specifics of your project.

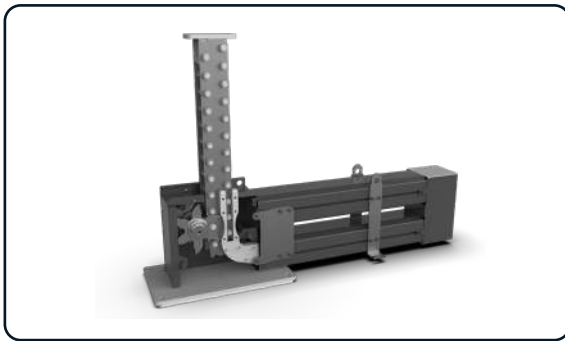

8 METERS

BASIC CONFIGURATION

Normal LinkLift operation with short or long reaction plates.



18 METERS

INTERMEDIATE FRAMES

1-2 braced frames increase rigidity for longer stroke lengths.



50 METERS*


WALL-GUIDED LOAD WITH CHAIN GUIDES

Guides are fixed to the wall and guide the load and chains along the path.


*: Contact us for specific requirements

LOAD CAPACITIES

CHOOSING THE RIGHT LINKLIFT

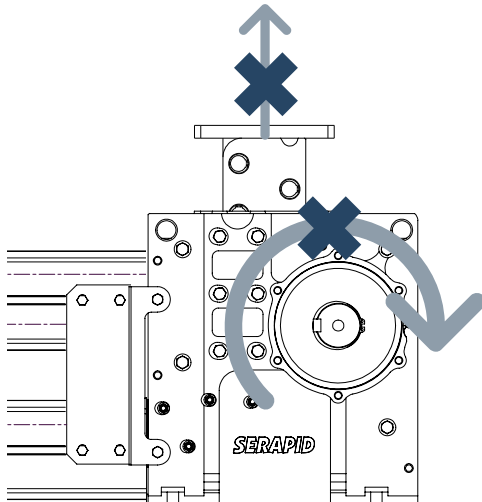

STATIC
(platform not in motion)

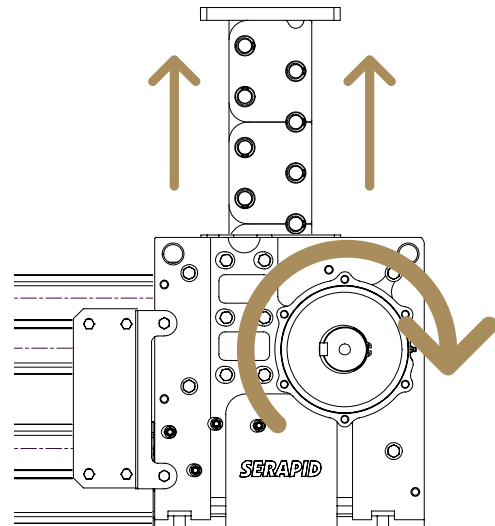


DYNAMIC
(platform in motion)

MODEL	LL30	LL50	LL50R	LL80	LL80R	LL100	LL100R
STATIC CAPACITY							
Max Load per Collumn [kN]	20	50	70	100	125	130	200
Stroke Limit [m]	1.9	2	1	3.5	2	6	3.5
Max Stroke [m]	1.9	4	4	6.4	6.4	8	8
Load Limit per collumn [kN]	20	10	10	40	40	70	70
DYNAMIC CAPACITY							
Max Load per Collumn [kN]	10	15	30	50	90	75	150
Stroke Limit [m]	1.9	3.5	3	6	4	7.5	5
Max Stroke [m]	1.9	4	4	6.4	6.4	8	8
Load Limit per Collumn [kN]	10	10	10	40	40	70	70


LOAD CAPACITIES

BASIC CONFIGURATION

LINKLIFT STATIC CAPACITY

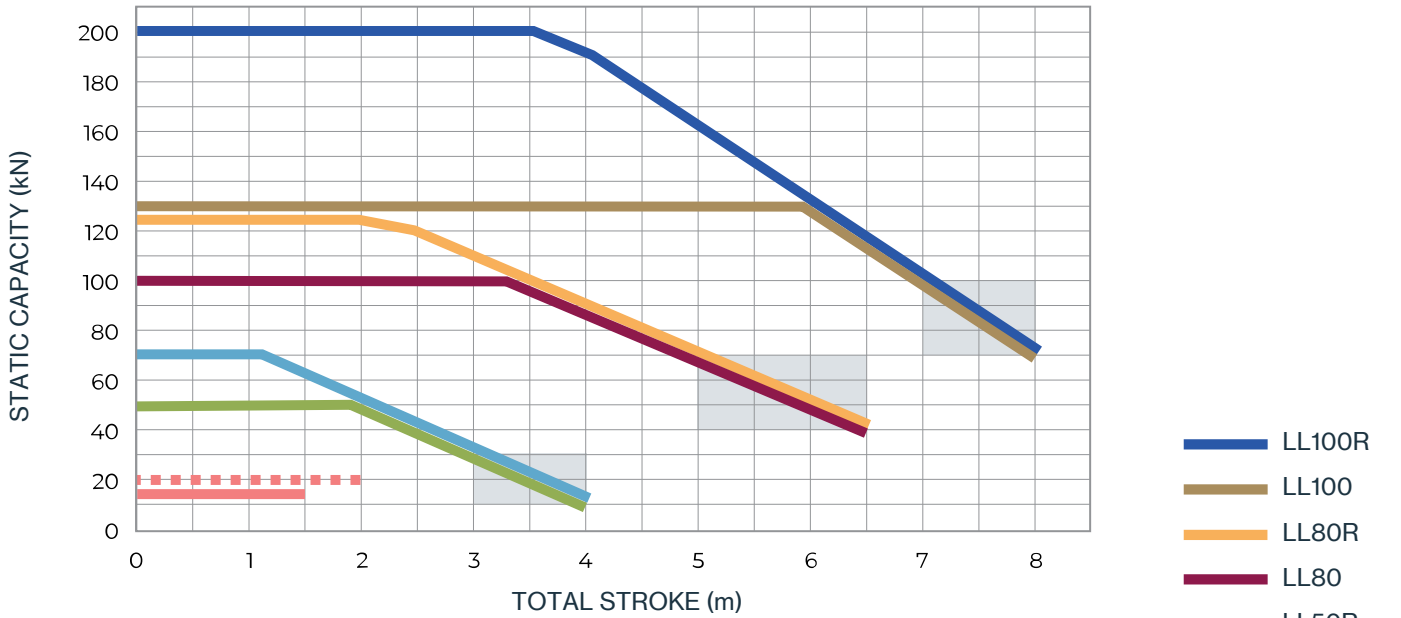


LINKLIFT DYNAMIC CAPACITY

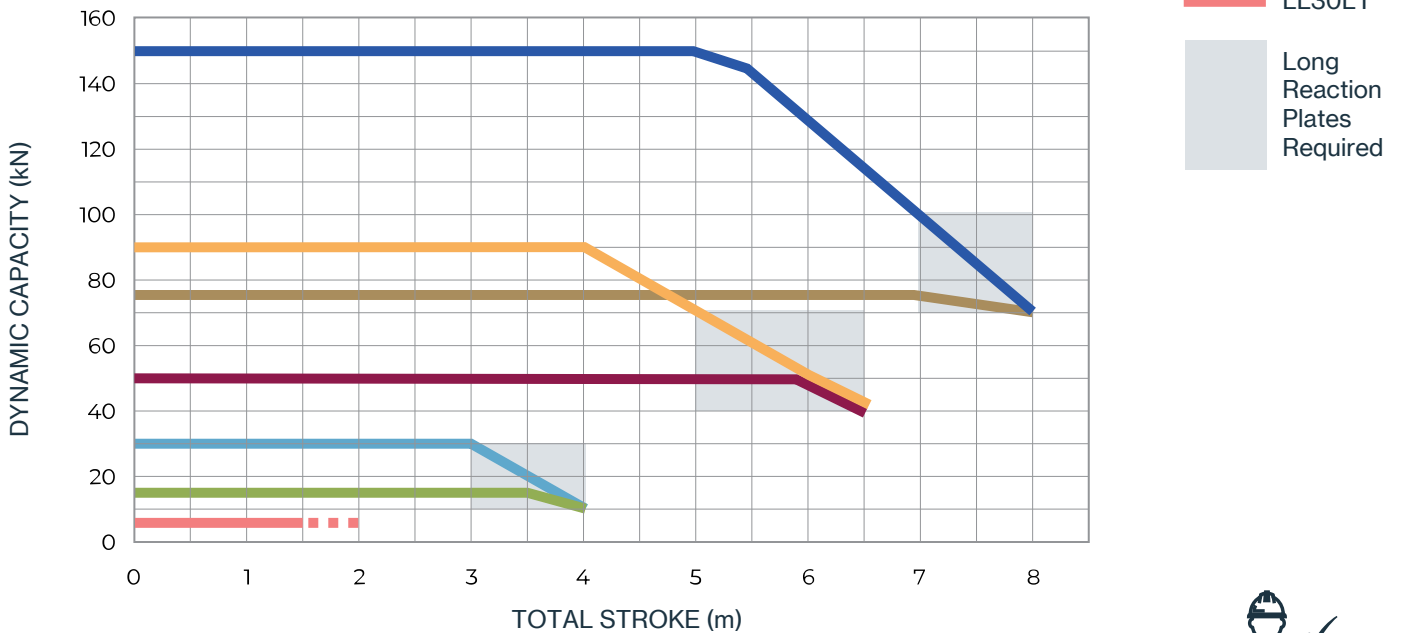

LOAD CAPACITIES WITH INTERMEDIATE FRAMES


LINKLIFT STATIC CAPACITY

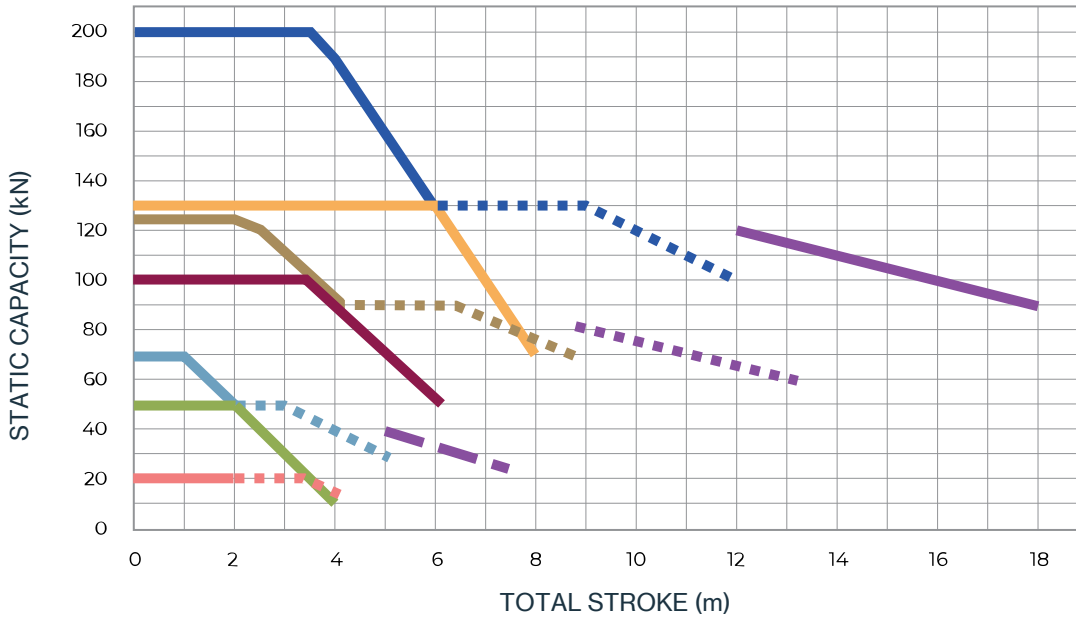


- LL100R
 - LL100R + 1 IF
 - LL100R + 2 IF
 - LL100
 - LL100 + 1 IF
 - LL100 + 2 IF
 - LL100/R + 2 IF
 - LL80R
 - LL80R + 1 IF
 - LL80R + 2 IF
 - LL80
 - LL80 + 1 IF
 - LL80 + 2 IF
 - LL80/R + 2 IF
 - LL50
 - LL50 + 1 IF
 - LL50 + 2 IF
 - LL50R
 - LL50R + 1 IF
 - LL50R + 2 IF
 - LL50/R + 2 IF
 - LL30
 - LL30 + 1 IF
- Long Reaction Plates Required

*IF: Intermediate Frame

LINKLIFT DYNAMIC CAPACITY

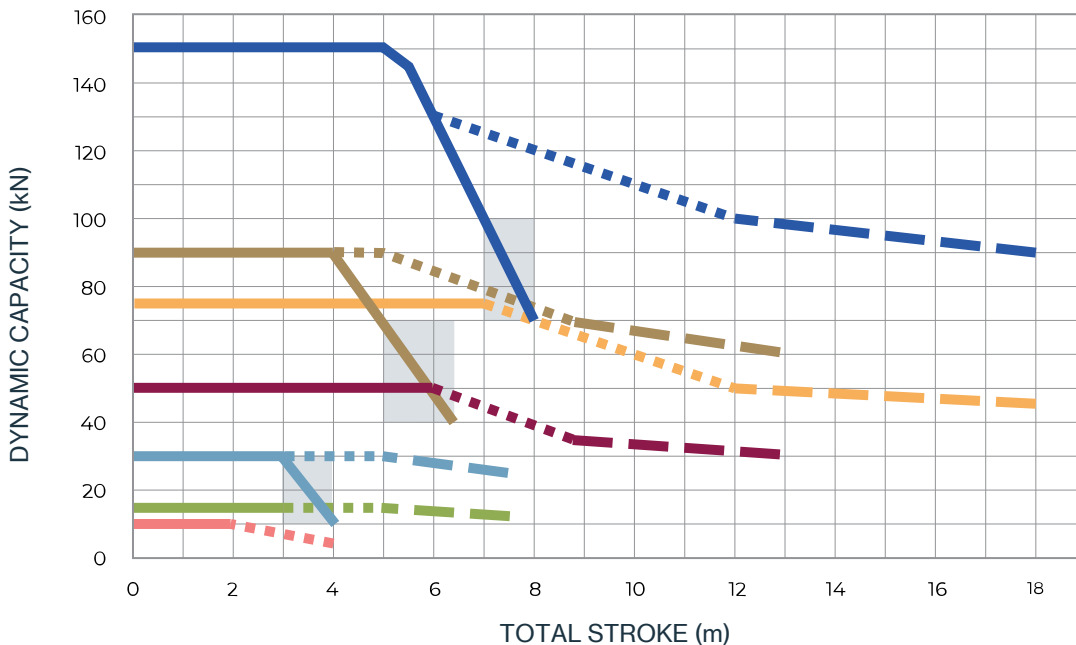

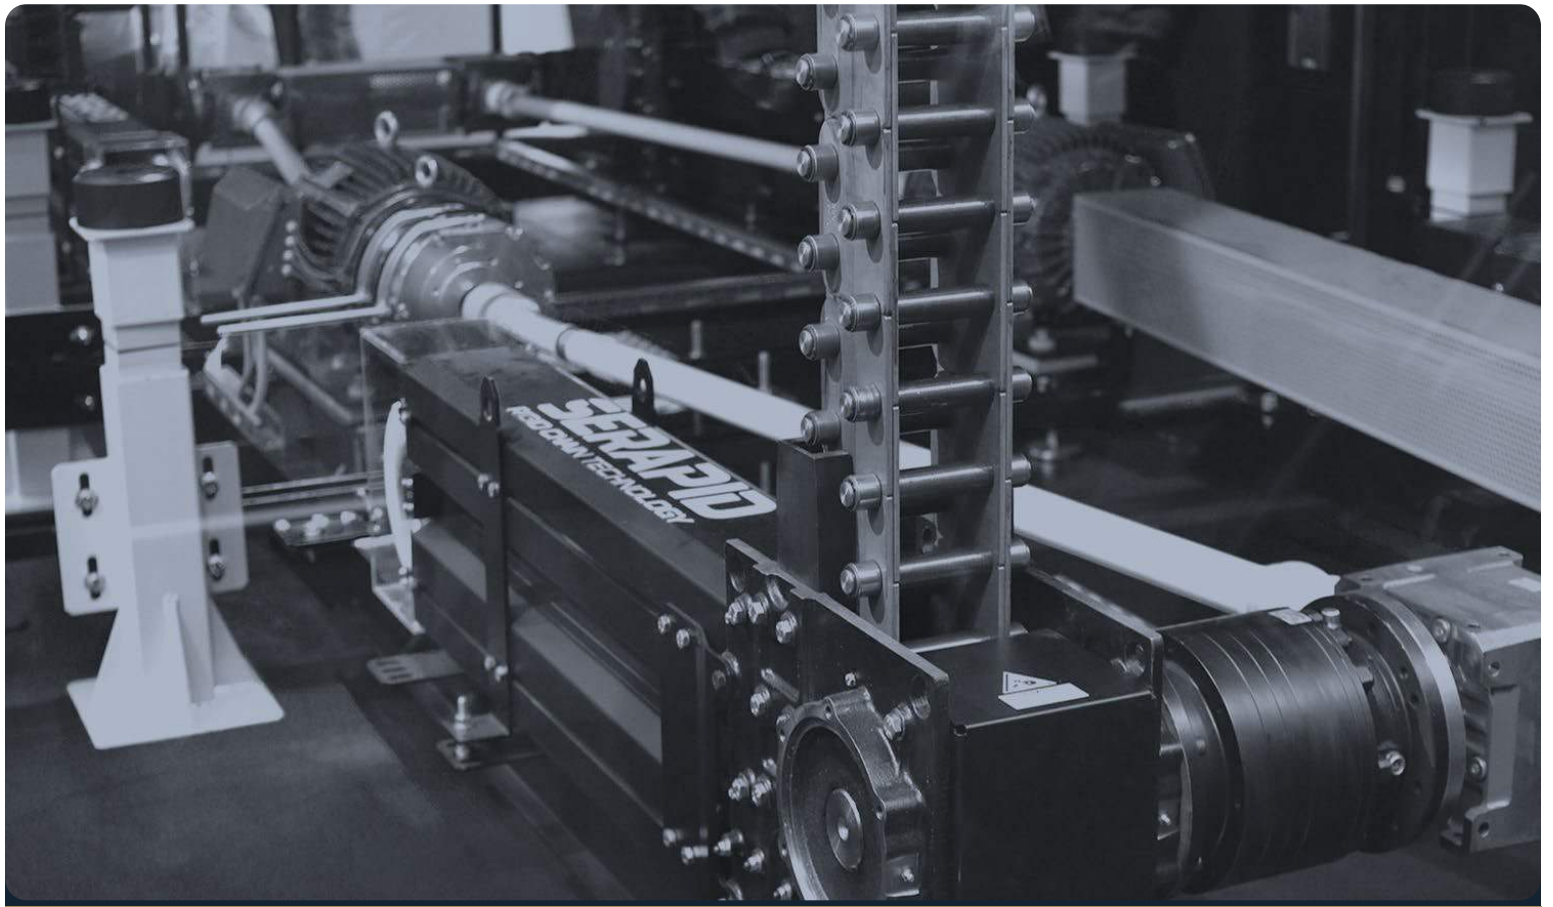

PRODUCT **OPTIONS**

MAGAZINE (STRAND) OPTIONS

LOAD CELL / REACTION PLATES

INTERMEDIATE FRAMES

POSITIONING DEVICES

MAGAZINE OPTIONS

TECHNICAL GUIDELINES



1 Strand Magazine



2 Strand Magazine



3 Strand Magazine

STRAND CONFIGURATION	Stroke MIN (mm)	Stroke MAX (mm)	Step Range (mm)	Linear Mass* (kg)
LL 30 – 1 Strand MAG	200	1900	▶ 100	0.6 + (Ct*2.5)
LL 30 – 2 Strand MAG	500	1900	▶ 100	2.0 + (Ct*2.5)
LL 50/50R – 1 Strand MAG	400	4000	▶ 100	2.0 + (Ct*5)
LL 50/50R – 2 Strand MAG	1000	4000	▶ 100	5.0 + (Ct*4.5)
LL 50/50R – 3 Strand MAG	2000	4000	▶ 300	12.5 + (Ct*3.5)
LL 80/80R – 1 Strand MAG	800	4800	▶ 100	7.0 + (Ct*12)
LL 80/80R – 2 Strand MAG	1000	6400	▶ 100	16.0 + (Ct*10)
LL 80/80R – 3 Strand MAG	2200	6400	▶ 300	41.0 + (Ct*8)
LL 100/100R – 1 Strand MAG	1000	6800	▶ 200	11.5 + (Ct*19)
LL 100/100R – 2 Strand MAG	1000	8000	▶ 200	27.0 + (Ct*16)
LL 100/100R – 3 Strand MAG	4000	7900	▶ 300	63.5 + (Ct*13)

Ct = Total Stroke / Travel Distance

*Weights may vary depending on strand design.

LOAD CELLS & REACTION PLATES



LOAD CELL OPTION


The load cell allows monitoring at the top of the lift column where the force is applied utilizing a force transducer with a thin film sensor for increased accuracy.



REACTION PLATES OPTION


For speeds above 200mm/s, and for long stroke distances, LinkLift must be equipped with long reaction plates. Stroke distances are defined below:

A

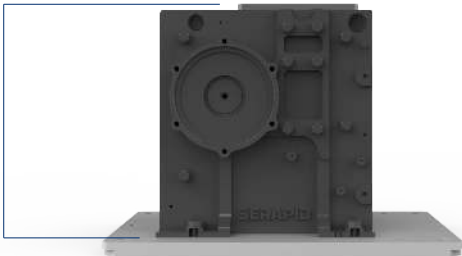


BASIC CONFIGURATION

B

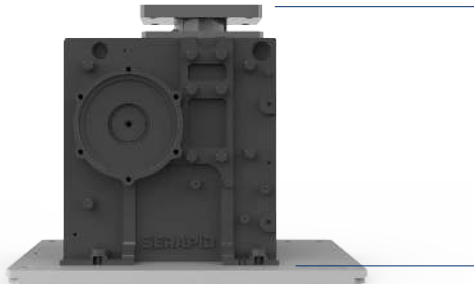


WITH LOAD CELL

C

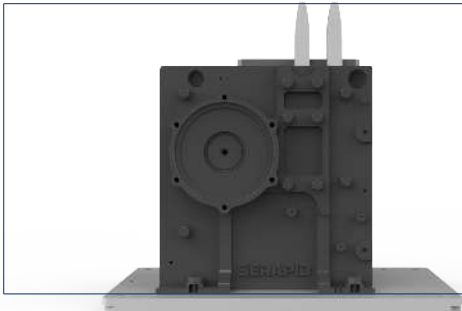

WITH LONG REACTION PLATES

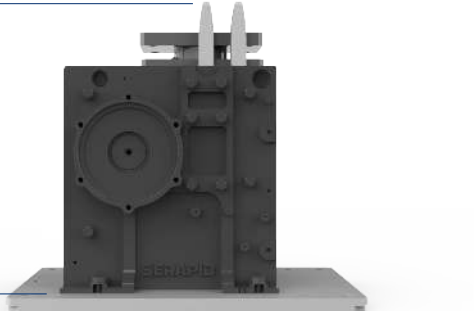

WITH LONG REACTION PLATES AND LOAD CELL

MODEL	LONG REACTION PLATE NEEDED
-------	----------------------------

LL50/R	Ct > 30m
LL80/R	Ct > 50m
LL 100/R	Ct > 70m

Ct = Total Stroke / Travel Distance

MODEL	A mm	B mm	C mm
-------	------	------	------


LL30	190	255	225/255
LL50	290.5	320.5	366
LL50R	290.5	350.5	366
LL80	460	480	580
LL80R	460	500	580
LL 100/R	572	592	722

FOR ILLUSTRATION ONLY
UNCONTROLLED IF DOWNLOADED OR PRINTED
NOT APPROVED FOR OPERATIONAL USE.



INTERMEDIATE FRAMES

Each additional frame increases the height of the lowest possible position.

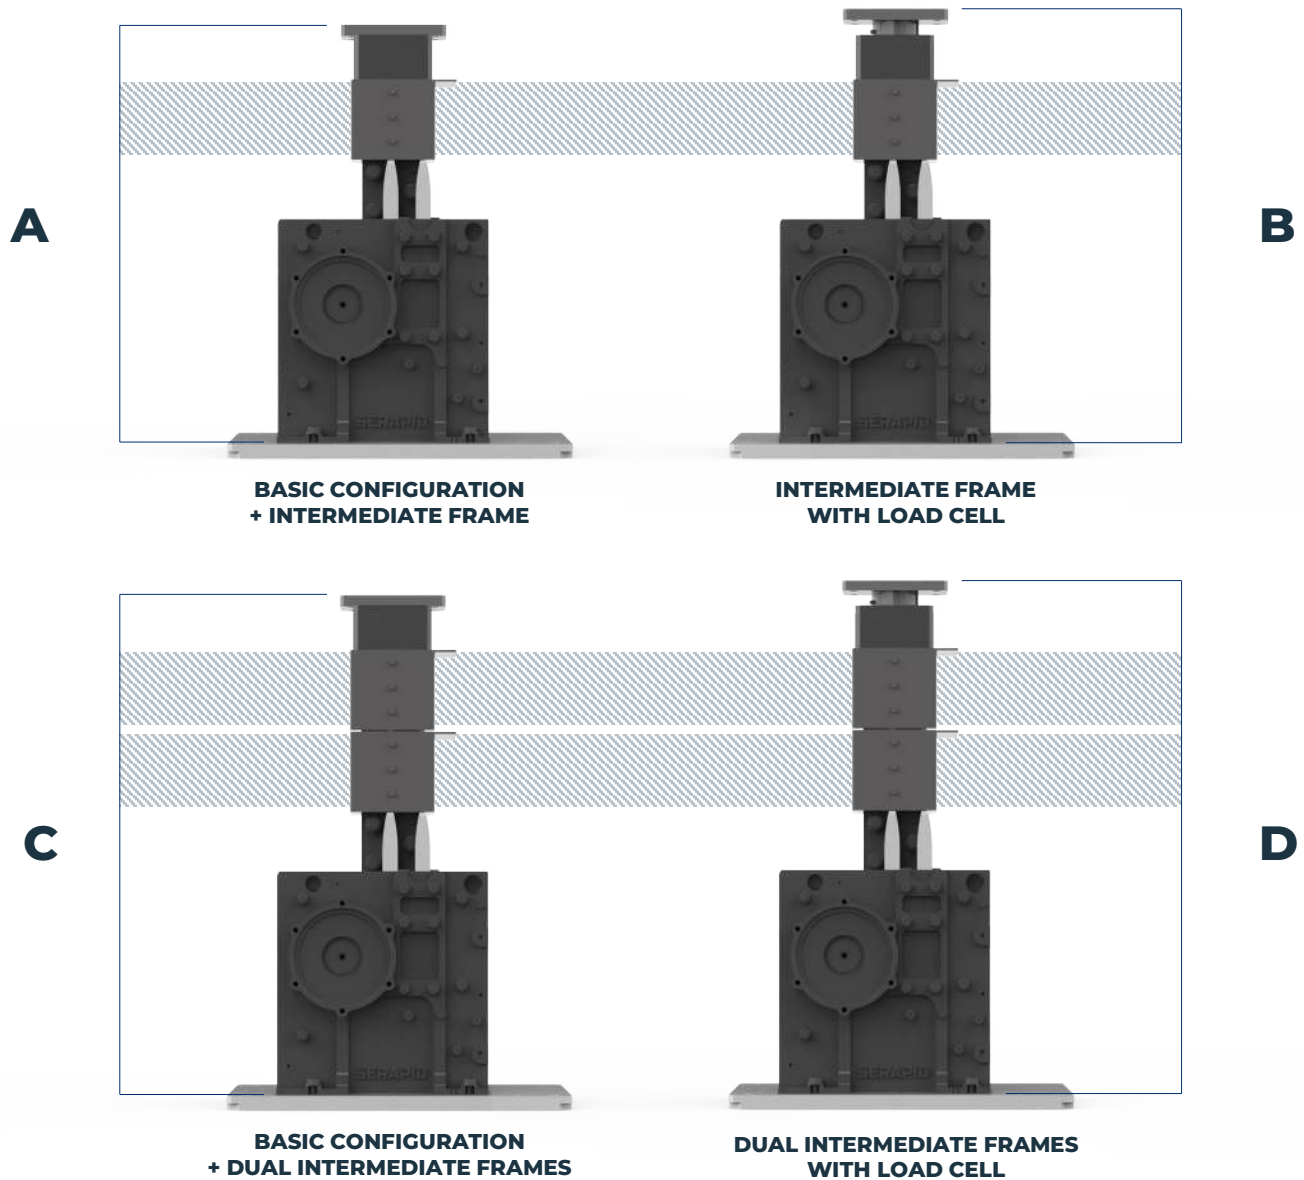

MODEL	A mm	B mm	C mm	D mm
LL50/R	590	605	790	805
LL80/R	933	940	1253	1260
LL 100/R	1148	1162	1538	1552

FOR ILLUSTRATION ONLY
UNCONTROLLED IF DOWNLOADED OR PRINTED
NOT APPROVED FOR OPERATIONAL USE.

POSITIONING OPTIONS




CAM LIMIT SWITCH | REPEATABLE POSITIONING

A CAM Limit switch is available with 2 to 8 repeatable positions, which can be set independently of each other. The switch is mounted to the drive shaft with an appropriate mounting bracket.




ENCODER | PROGRAMMABLE POSITIONING

An encoder provides programmable monitoring and positioning with a resolution of 1024 points per travel and accuracy of 0.5mm at the end of the column. The encoder is mounted to the drive shaft with an appropriate mounting bracket.

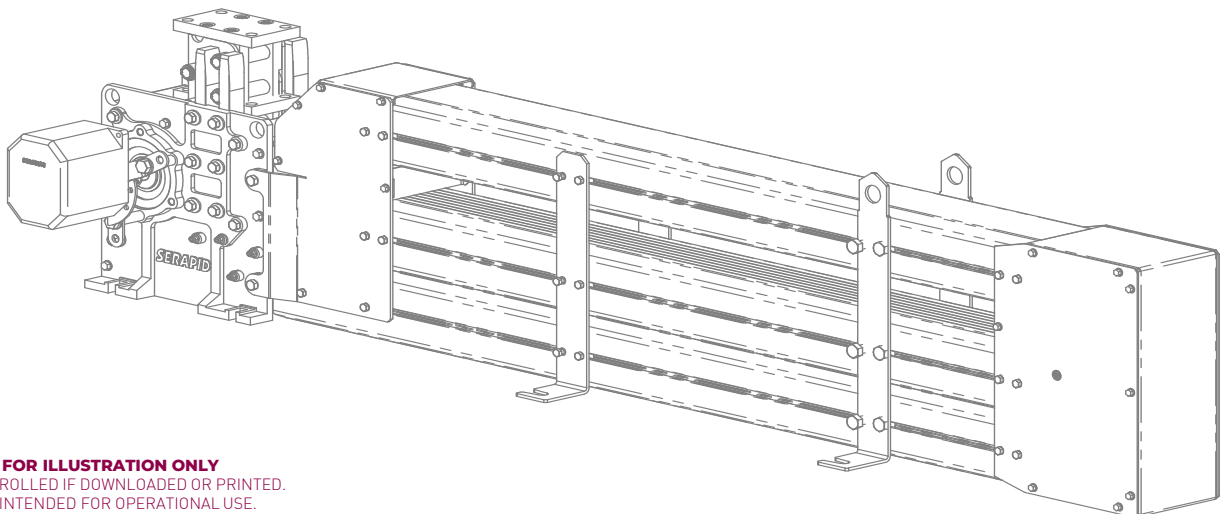

FOR ILLUSTRATION ONLY
UNCONTROLLED IF DOWNLOADED OR PRINTED.
NOT INTENDED FOR OPERATIONAL USE.

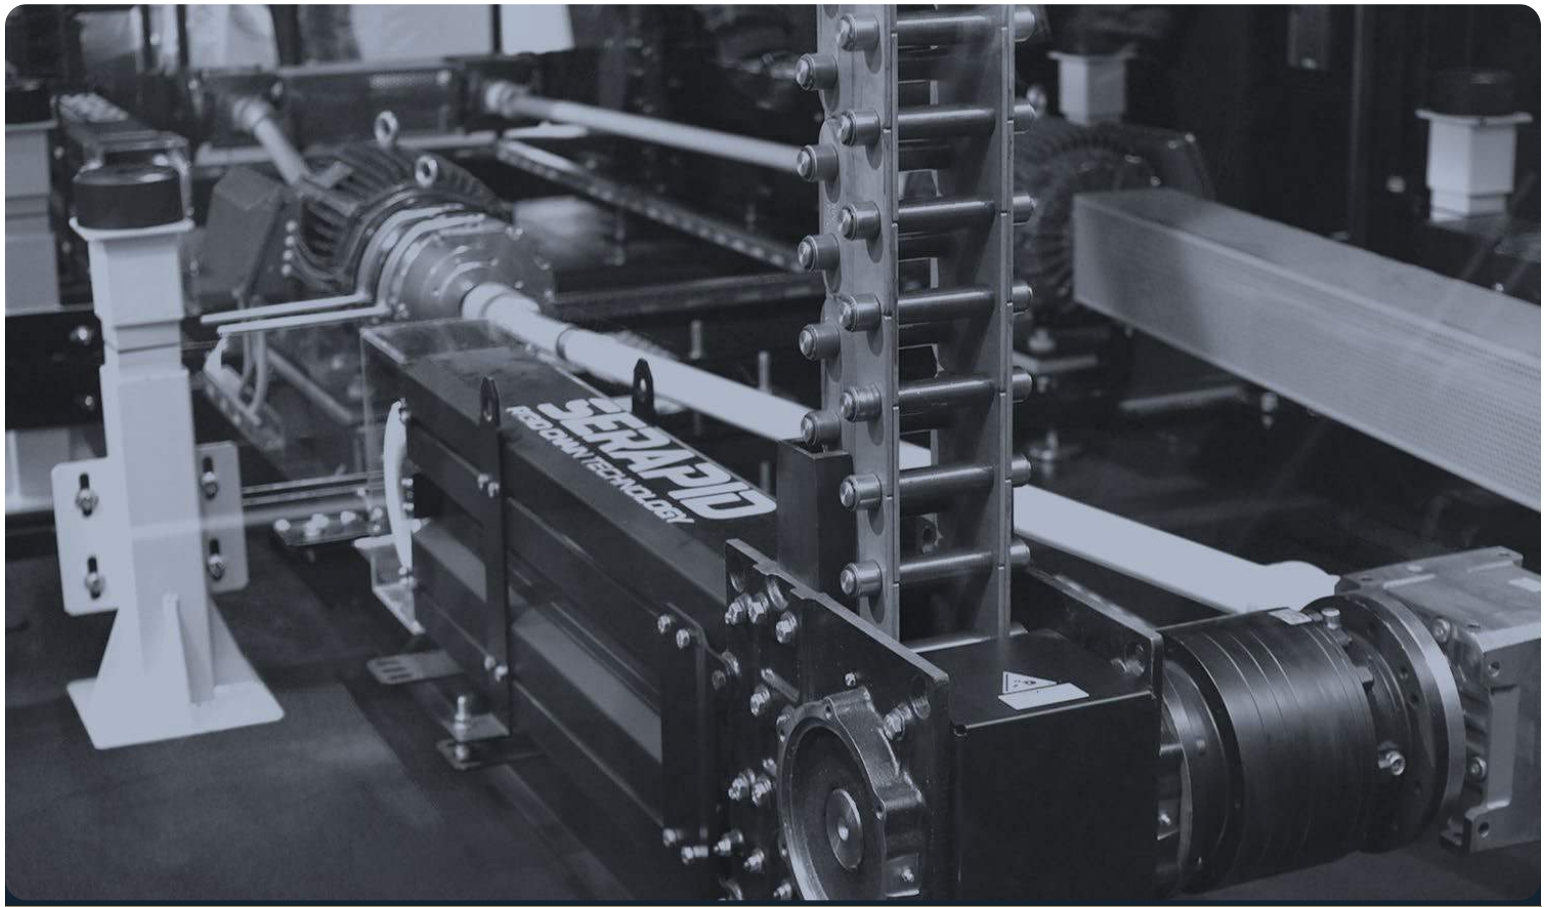

SAMPLE **DRAWINGS**

LL30

LL30LT

LL50/50R

LL80/80R

LL100/100R


LL30 DRAWINGS

FOR ILLUSTRATION ONLY

UNCONTROLLED IF DOWNLOADED OR PRINTED. NOT APPROVED FOR OPERATIONAL USE.

Shown here:
 ❖ **LL30** assembly
 ❖ No Load Cell
 ❖ Short Reaction Plates


Contact us for detailed drawings

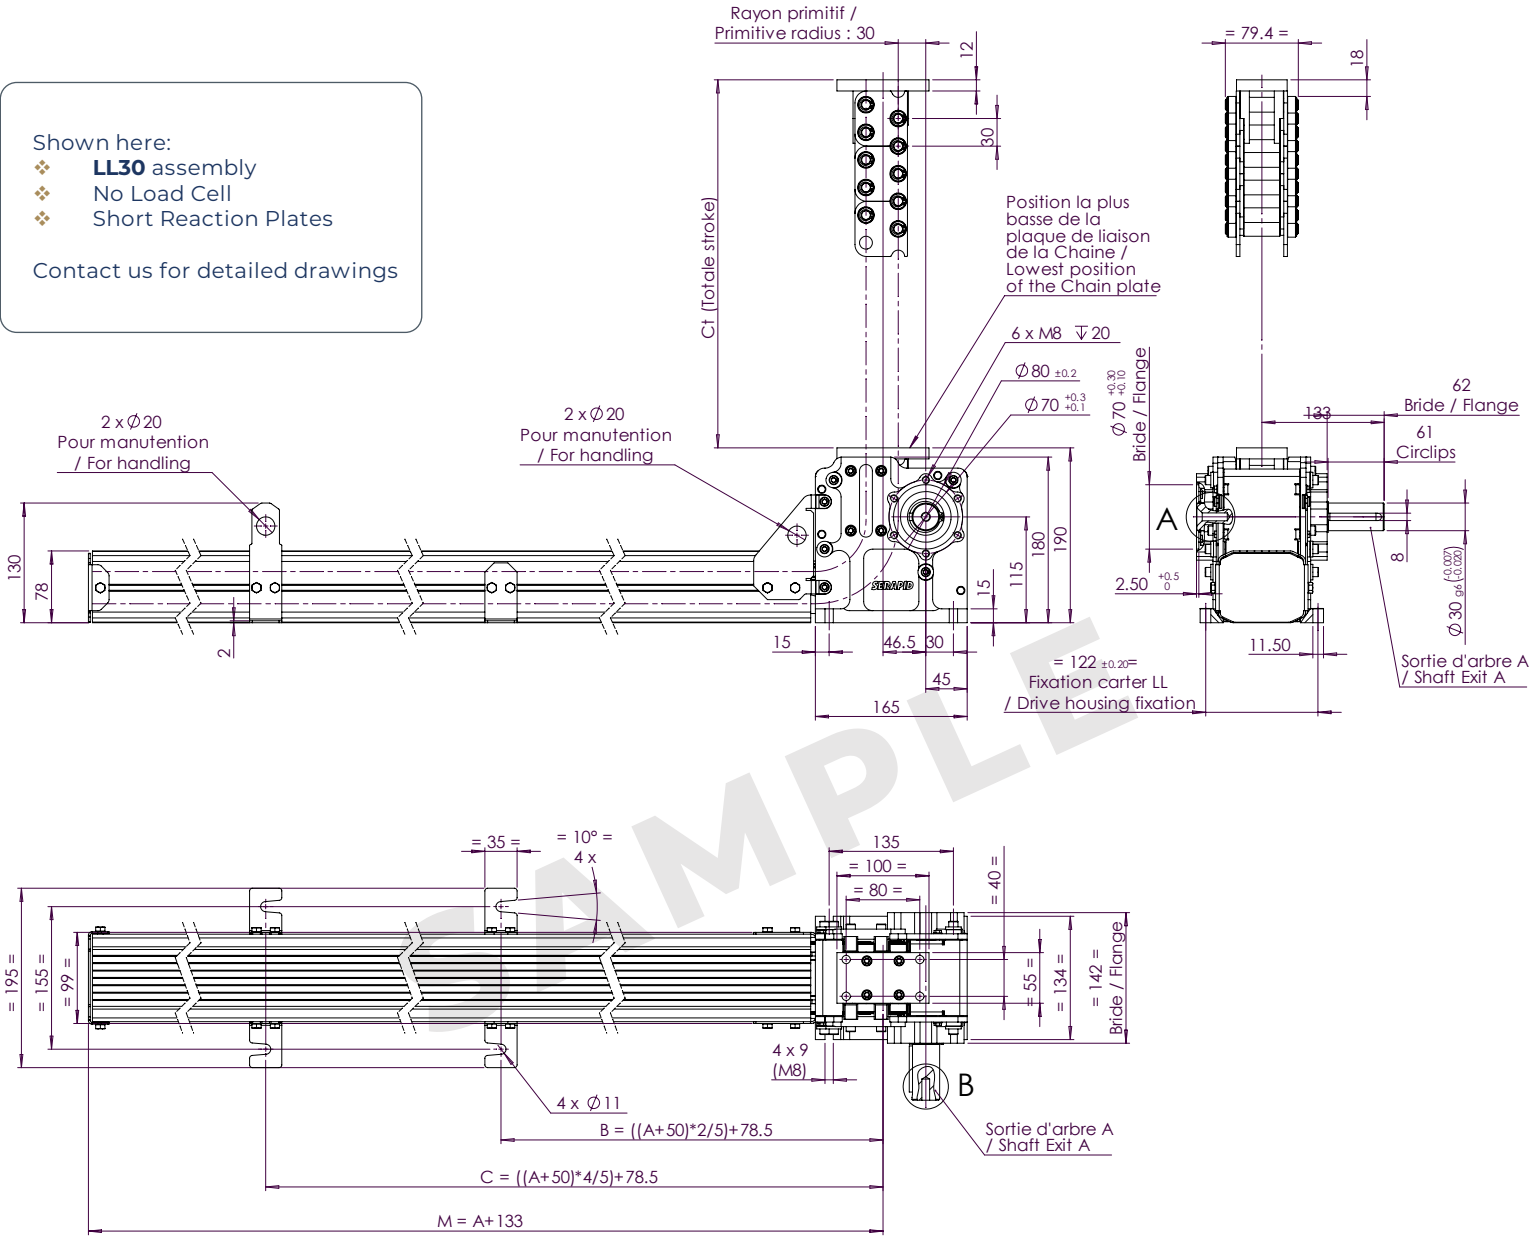

LL30LT COMPARISON

LOW TRIM OPTION

Our LinkLift 30LT (Low Trim) is a made-to-measure product aimed at addressing specific space-critical project needs. Product specifications available on request.

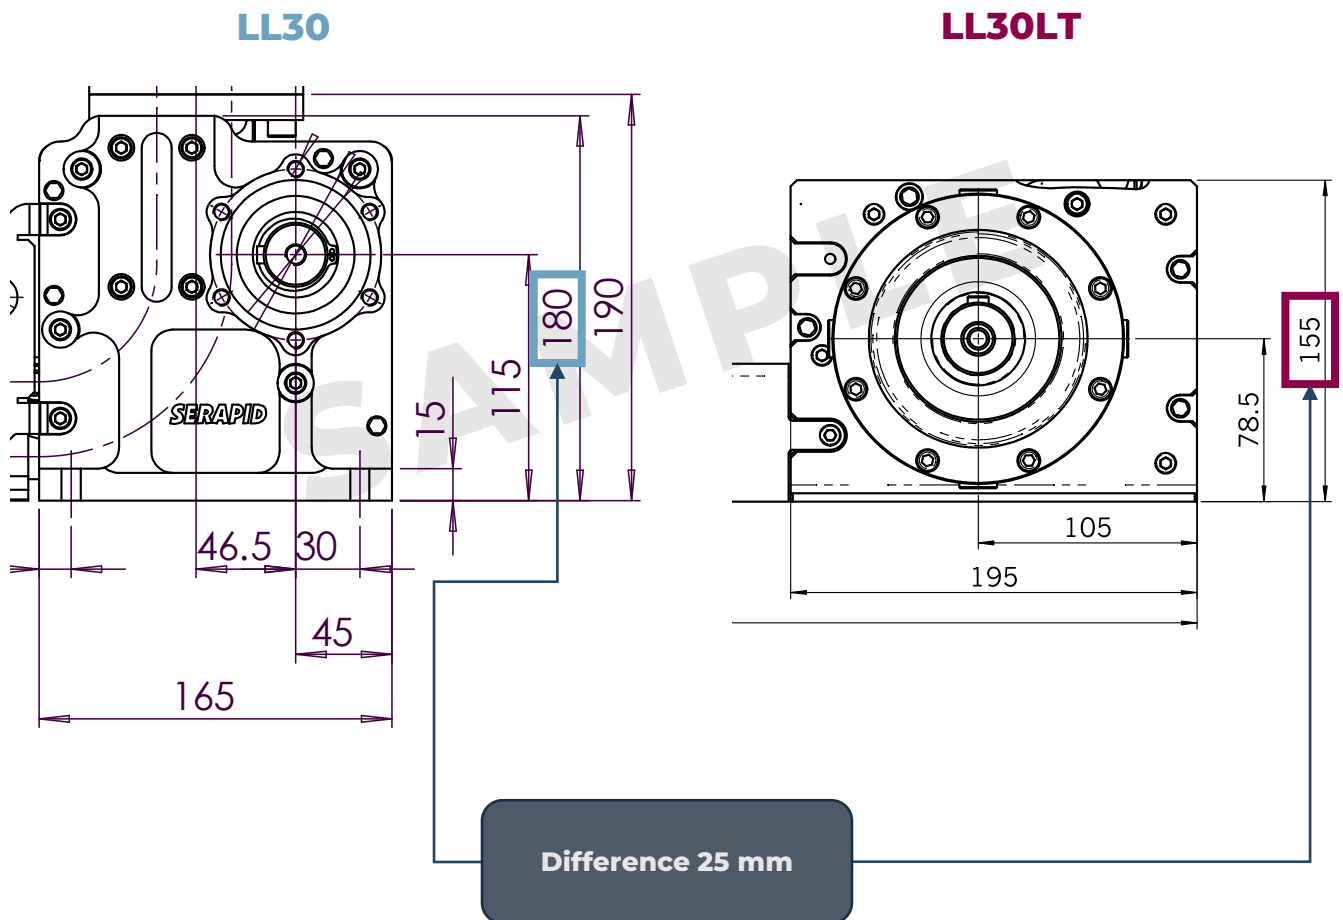

FOR ILLUSTRATION ONLY - UNCONTROLLED IF DOWNLOADED OR PRINTED. - NOT APPROVED FOR OPERATIONAL USE.

FOR ILLUSTRATION ONLY


UNCONTROLLED IF DOWNLOADED OR PRINTED. NOT APPROVED FOR OPERATIONAL USE.

Shown here:

- ❖ LL50 assembly
- ❖ No Load Cell
- ❖ Short Reaction Plates

Contact us for detailed drawings

Rayon primitif /
Primitive radius : 47.75

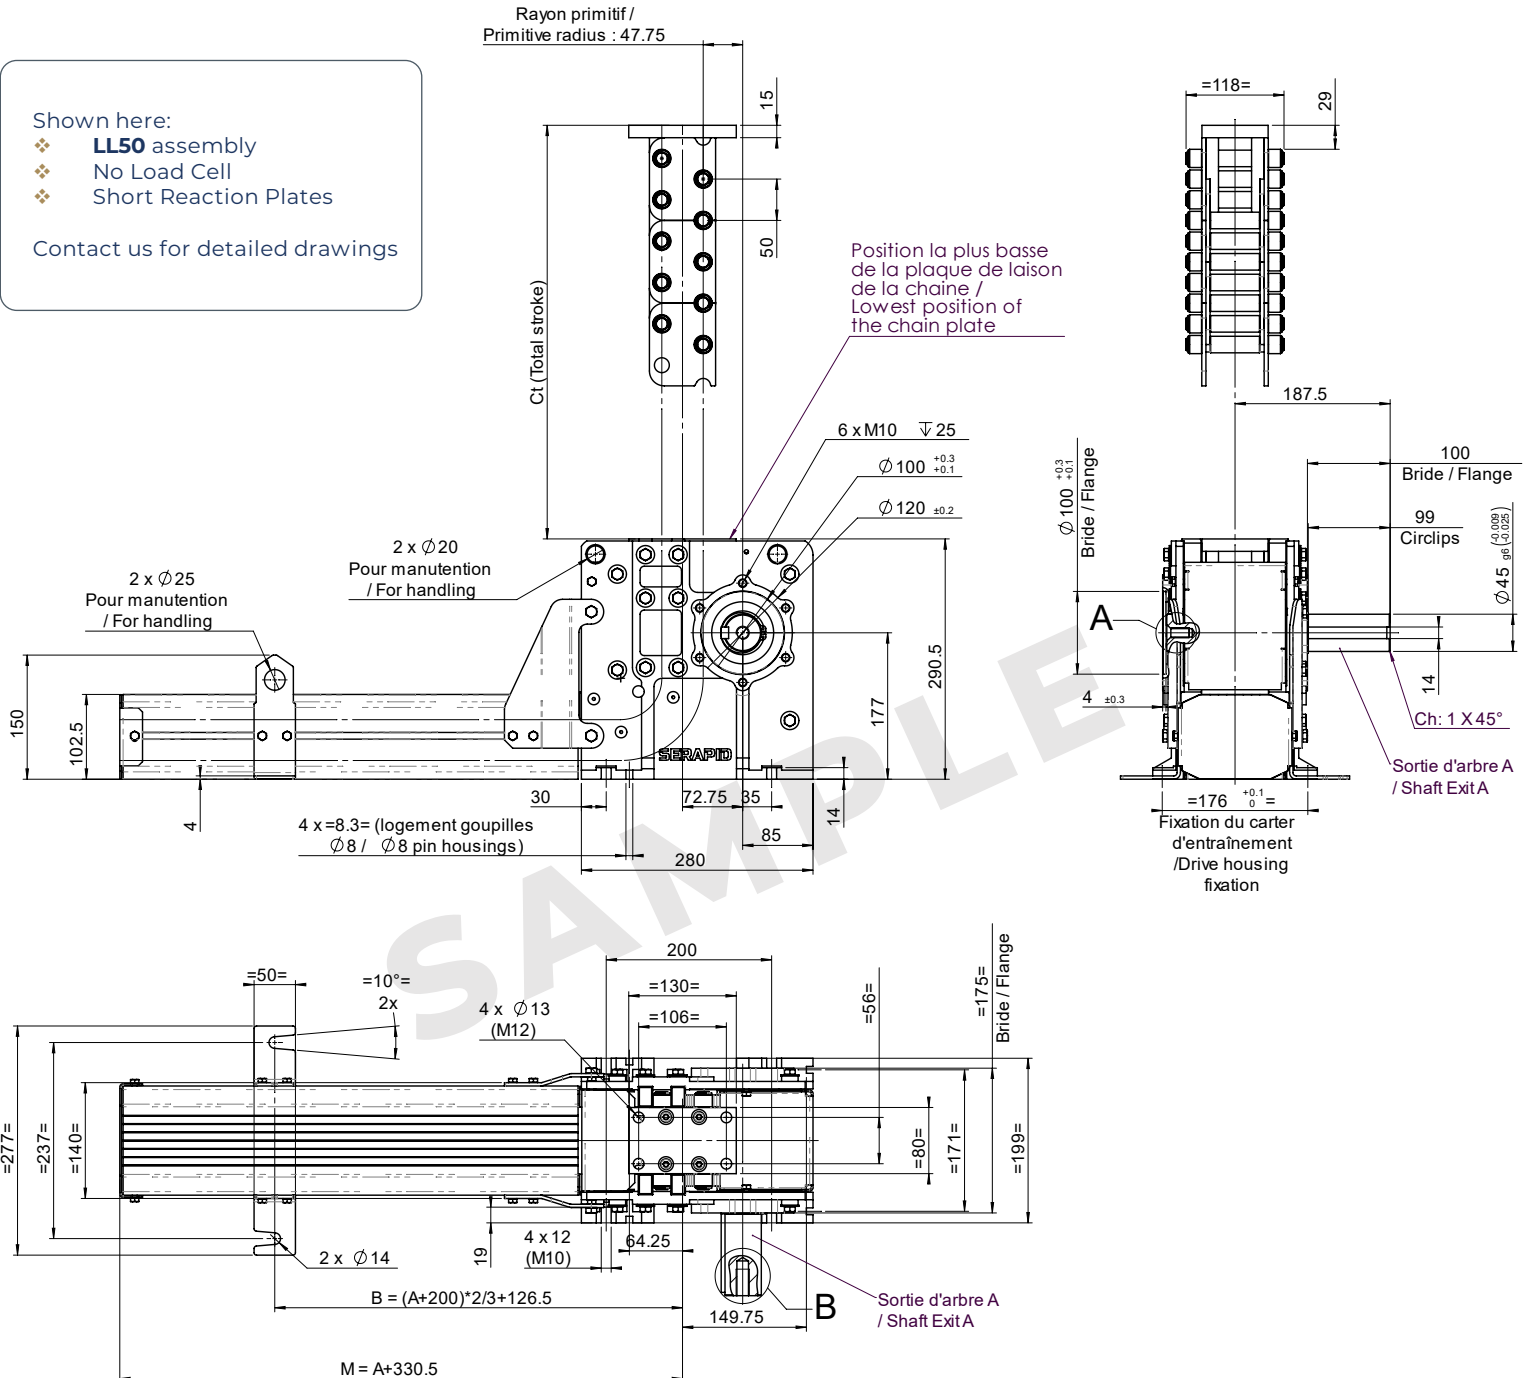

FOR ILLUSTRATION ONLY



UNCONTROLLED IF DOWNLOADED OR PRINTED. NOT APPROVED FOR OPERATIONAL USE.

Shown here:

- ❖ LL80 assembly
- ❖ No Load Cell
- ❖ Short Reaction Plates

Contact us for detailed drawings

Rayon primitif /
Primitive radius : 76.4

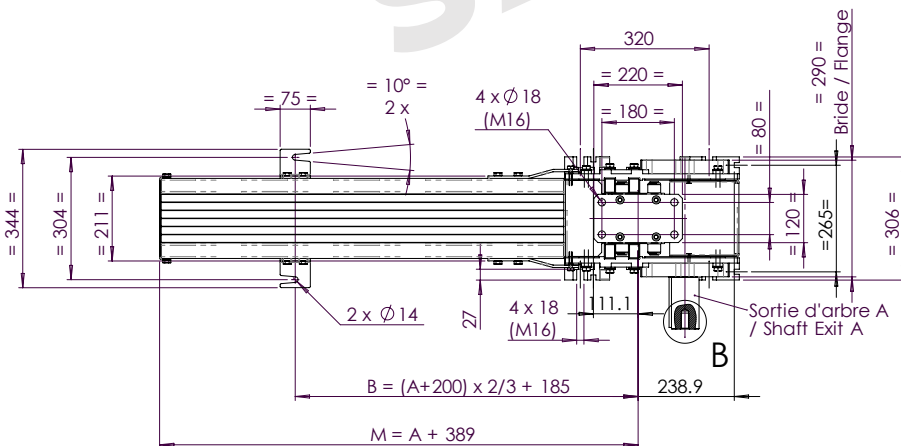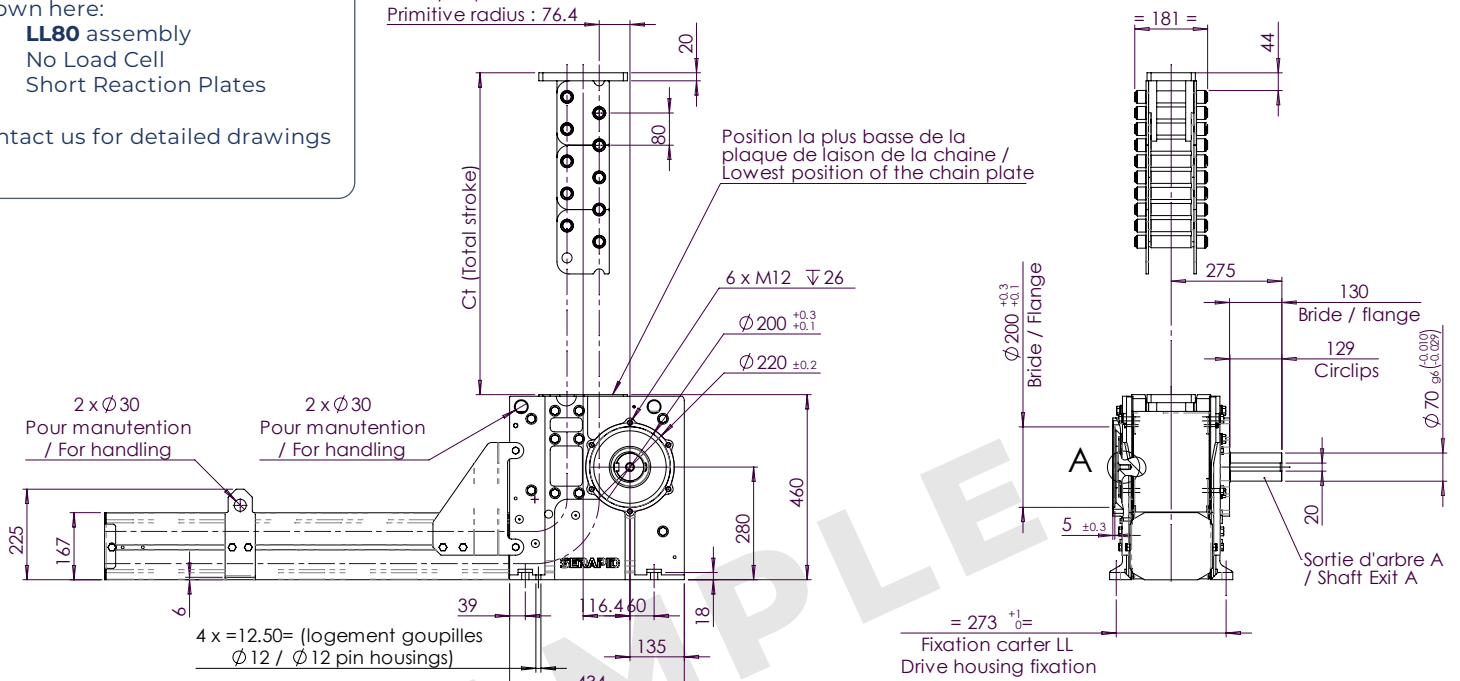


FOR ILLUSTRATION ONLY


UNCONTROLLED IF DOWNLOADED OR PRINTED. NOT APPROVED FOR OPERATIONAL USE.

Shown here:

- ❖ LL100 assembly
- ❖ No Load Cell
- ❖ Short Reaction Plates

Contact us for detailed drawings

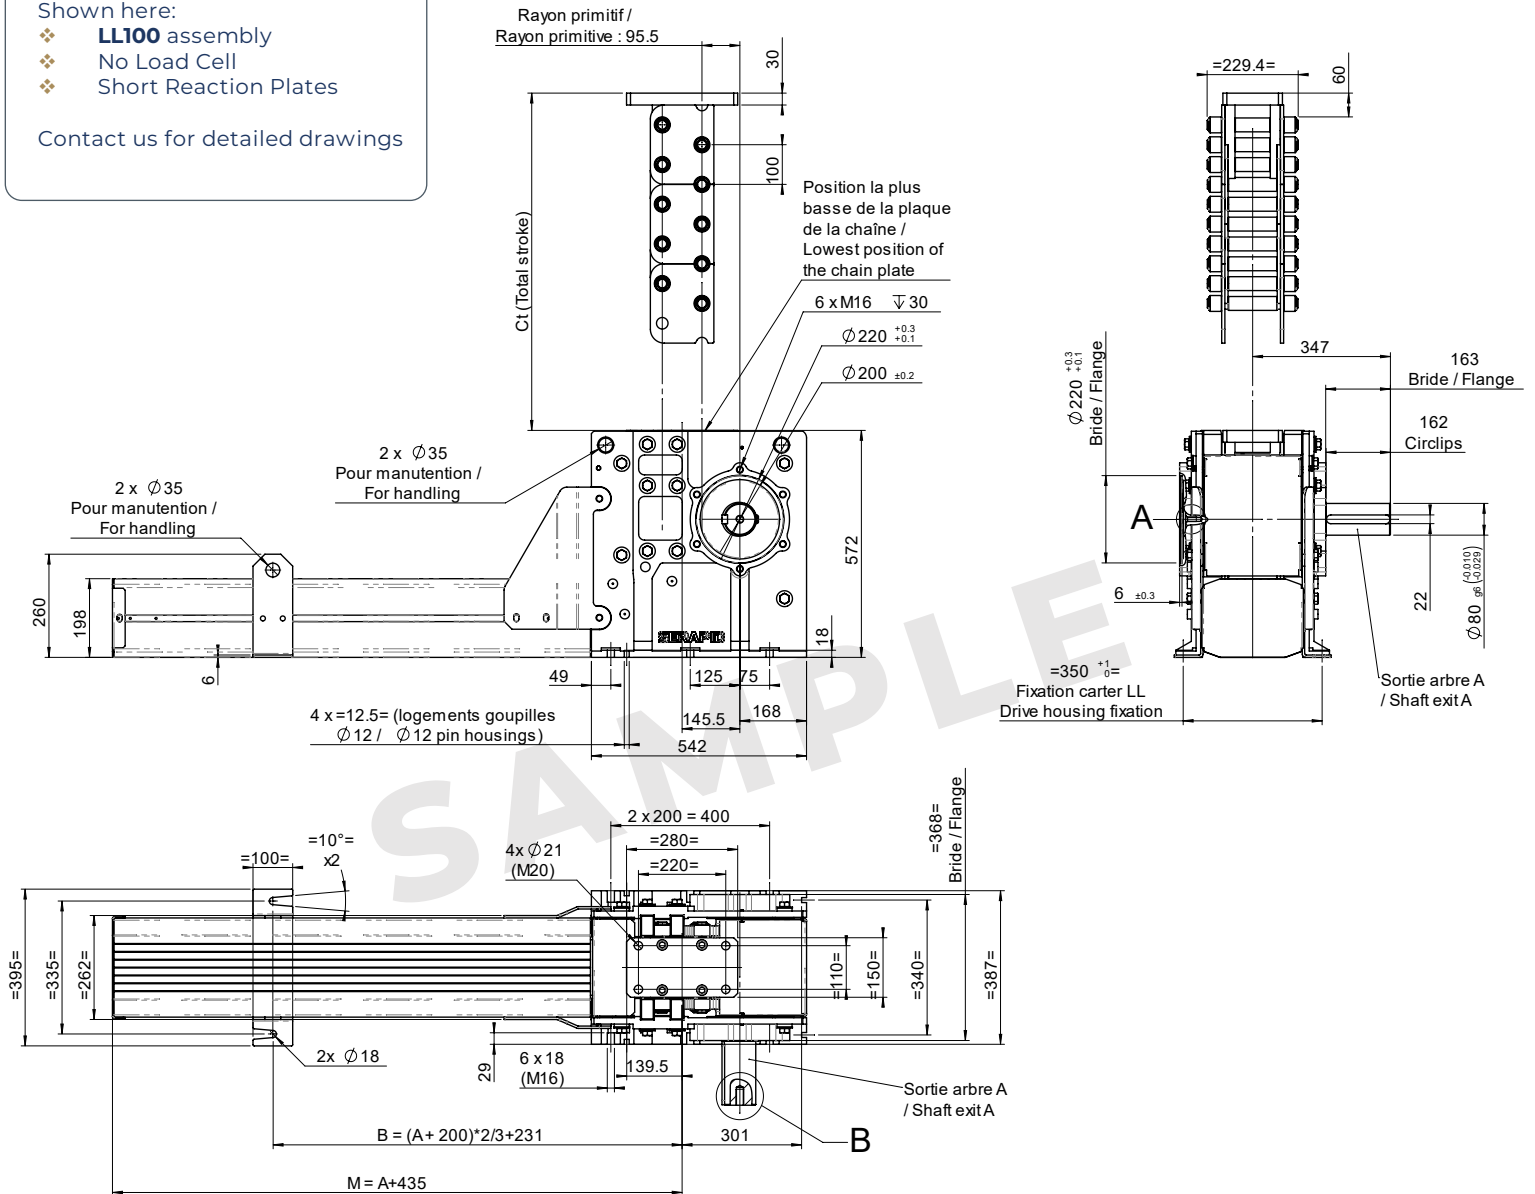

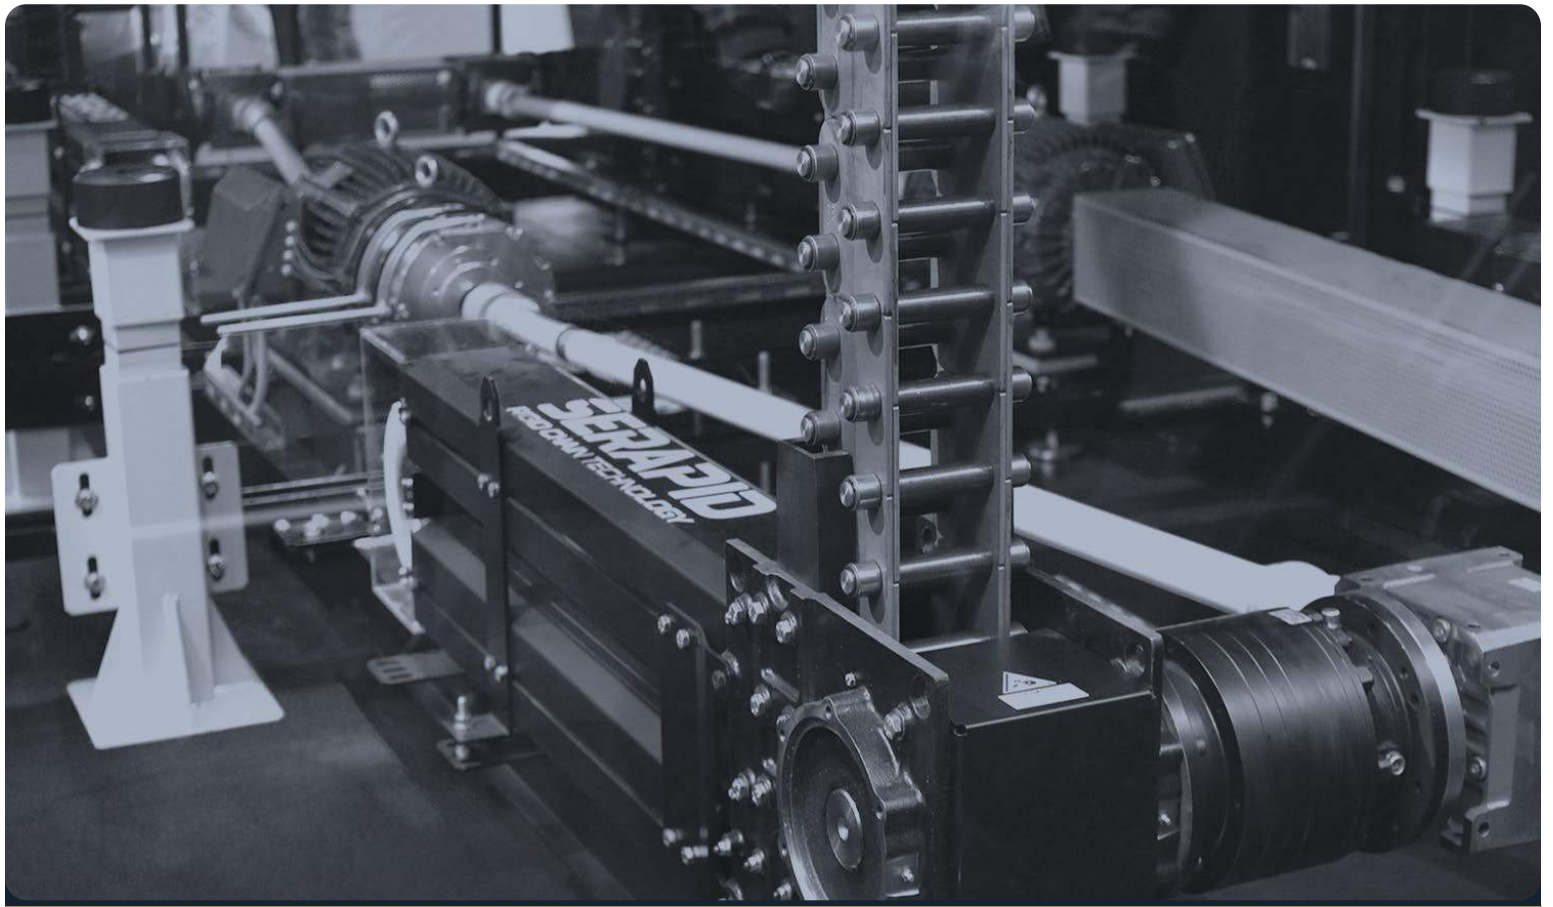

CONTACT US

SERAPID USA Inc.

34100 Mound Road
Sterling Heights, MI
48310

+1 (586)274-0774
info-us@serapid.com

SERAPID Germany GmbH

Willhelm-Frank-Strasse 30
D-97980
Bad Mergenheim

+49(0)7931 96 47-0
info-de@serapid.com

SERAPID France

4 Rue des frères Robbe
ZA Eurochannel
F-76370 Martin-Eglise

+33(0)2 32 06 35 60
info-fr@serapid.com

SERAPID UK Ltd.

Elm Farm Park, Great Green
Thurston Bury St. Edwards
IP31 3SH

+44 (0)1359 233335
info-uk@serapid.com

SERAPID ASIA

1 George Street, #10-01
Singapore
049145

+65 9119 58900
info-sg@serapid.com



Brand and product names are trademarks of their respective holders.
Subject to change. Publication even in parts is prohibited.
LinkLift 022024 PL201 First Edition

Copyright© 2024 – SERAPID Group – All Rights Reserved

SERAPID